


SERVICE INDICATOR & WARNING LIGHTS

1988 Toyota Celica

1986-89 MAINTENANCE
Toyota Service Indicator & Warning Lights
Celica

SERVICE INDICATOR & WARNING LIGHTS

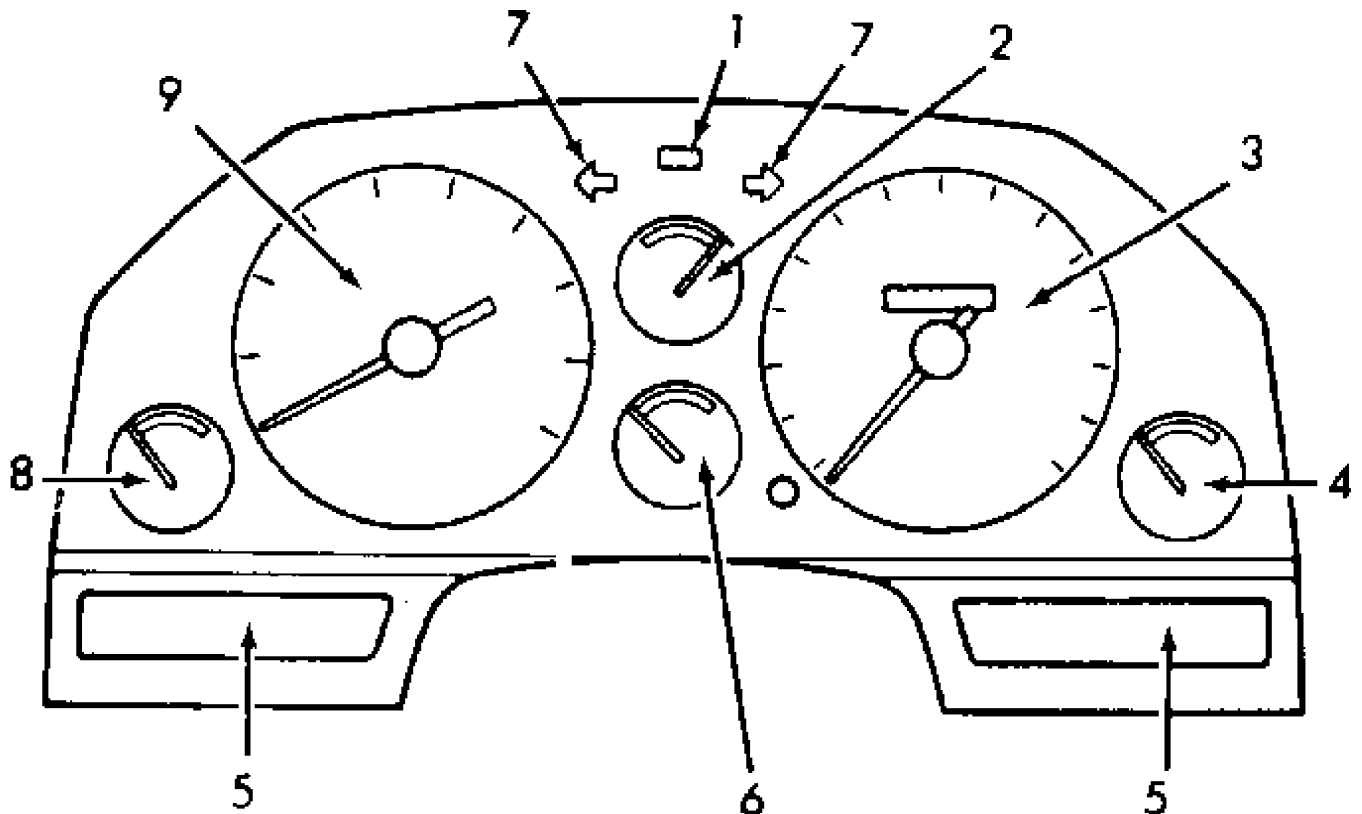

TYPICAL INSTRUMENT CLUSTER

1. High Beam Indicator Light
2. Fuel Gauge
3. Speedometer
4. Voltmeter or Turbo Boost Pressure Gauge
5. Warning/Indicator Lights
6. Engine Temperature Gauge
7. Turn Signal Indicator Lights
8. Oil Pressure Gauge
9. Tachometer

Fig. 1: Dash Gauges & Warning Lights
Courtesy of Toyota Motor Sales, U.S.A., Inc.

ENGINE TEMPERATURE GAUGE

Indicates engine coolant temperature. Gauge should register

below "HOT" range while driving.

OIL PRESSURE WARNING LIGHT

If light flickers or comes on while driving, oil pressure is low. If this occurs, stop the vehicle immediately and check the oil level. If oil level is okay and light remains on, have the system serviced as soon as possible.

VOLTMETER

If the gauge registers below the normal range for an extended period, check the alternator belt tension. If belt tension is okay, have the system serviced as soon as possible.

DISCHARGE WARNING LIGHT

Indicates that the battery is not charging properly. Check the alternator belt tension. If belt tension is okay, have the system serviced as soon as possible.

BRAKE SYSTEM WARNING LIGHT

This light indicates that either the parking brake is on or the brake fluid level is low.

ANTI-LOCK BRAKE SYSTEM (ABS) WARNING LIGHT

If this light comes on while driving, there is a malfunction in the ABS. Have the ABS serviced as soon as possible.

ENGINE SYSTEM WARNING LIGHT

If this light comes on while driving, it indicates a problem with the engine electrical system. On California vehicles, it also indicates a malfunction in the emission control system and may be used to access fault codes. Have the system serviced as soon as possible.

REAR LIGHT FAILURE WARNING LIGHT

If light comes on while engine is running, there is a bulb failure in one of the taillights. Replace the defective bulb as soon as possible.

TURBO BOOST PRESSURE GAUGE

Indicates boost pressure in the turbocharging system. DO NOT drive with the pressure above the normal range for extended periods. Continuous pressures above the normal range can cause engine damage.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) WARNING LIGHT

If this light comes on while driving, there is a malfunction in the Supplemental Restraint System (SRS). Have the system serviced as soon as possible.