

## ABBREVIATIONS

The following abbreviations are used in this manual.

A/C	= Air Conditioner
ABS	= Anti-Lock Brake System
A/T	= Automatic Transmission
C/P	= Coupe Type
COMB.	= Combination
ECT	= Electronic Controlled Transmission
ECU	= Electronic Control Unit
EFI	= Electronic Fuel Injection
EGR	= Exhaust Gas Recirculation
EX.	= Except
FL	= Fusible Link
IIA	= Integrated Ignition Assembly
ISC	= Idle Speed Control
J/B	= Junction Block
L/B	= Liftback Type
LH	= Left-Hand
M/T	= Manual Transmission
O/D	= Overdrive
R/B	= Relay Block
RH	= Right-Hand
SRS	= Supplemental Restraint System
SW	= Switch
TEMP.	= Temperature
VSV	= Vacuum Switching Valve
W/	= With
W/O	= Without