


CHARGING

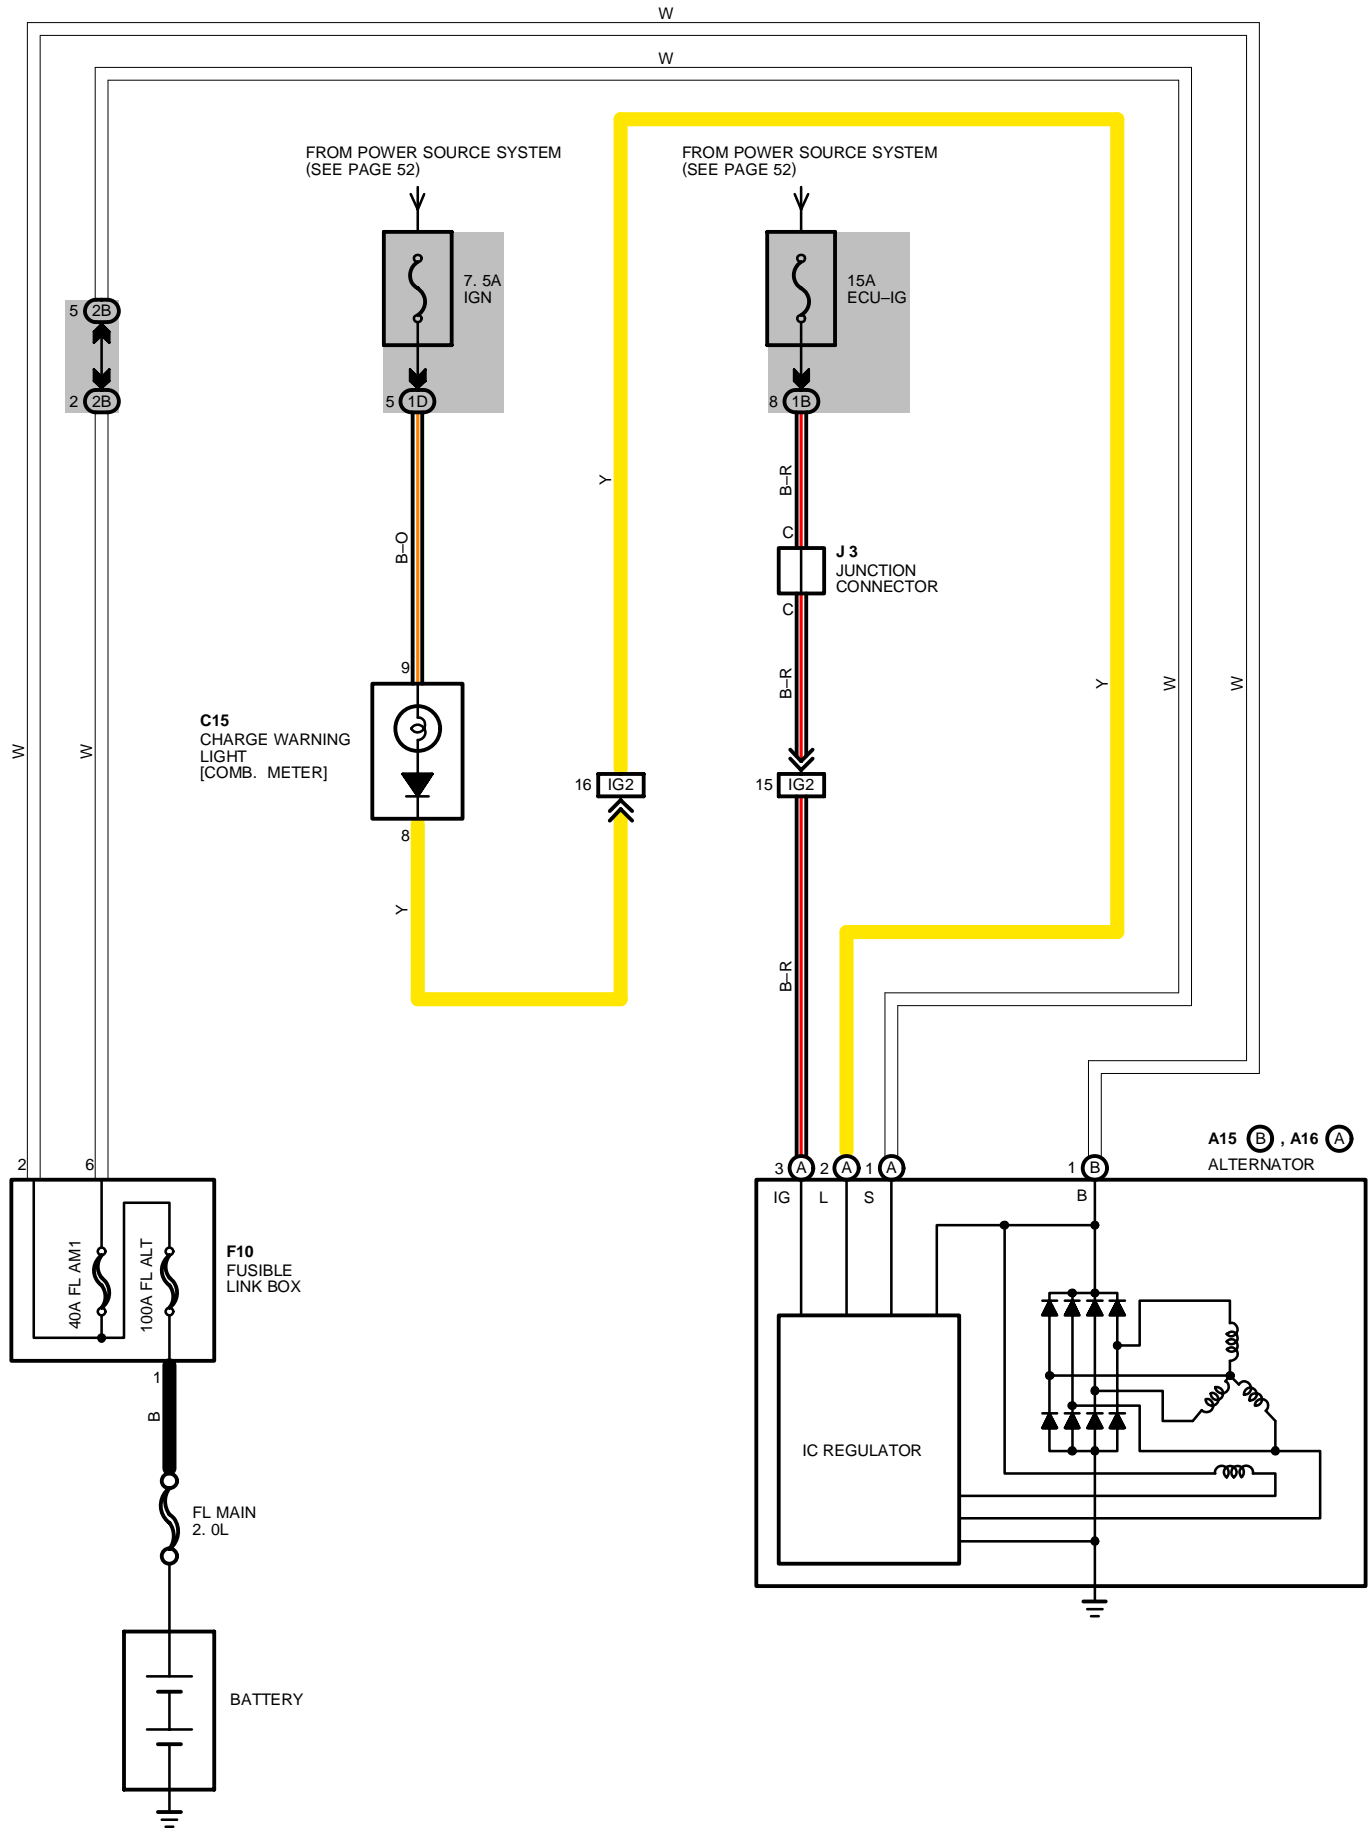

SERVICE HINTS

A16(A) ALTERNATOR

- (A) 1-GROUND: 13.9–15.1 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)
 13.5–14.3 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 115°C (239°F)
 (A) 2-GROUND: 0–4 VOLTS WITH IGNITION SW AT ON POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION





CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A15	B	26 (5S-FE), 27 (4A-FE)	C15	28	J 3	29
A16	A	26 (5S-FE), 27 (4A-FE)	F10	26 (5S-FE), 27 (4A-FE)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D		
2B	20	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	36	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)

 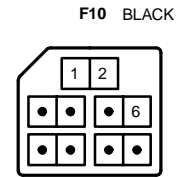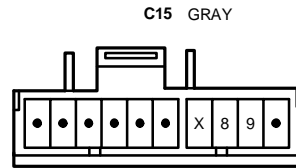 

(HINT : SEE PAGE 7)