


# ELECTRICAL WIRING ROUTING

## Position of Parts in Engine Compartment

[5S-FE]

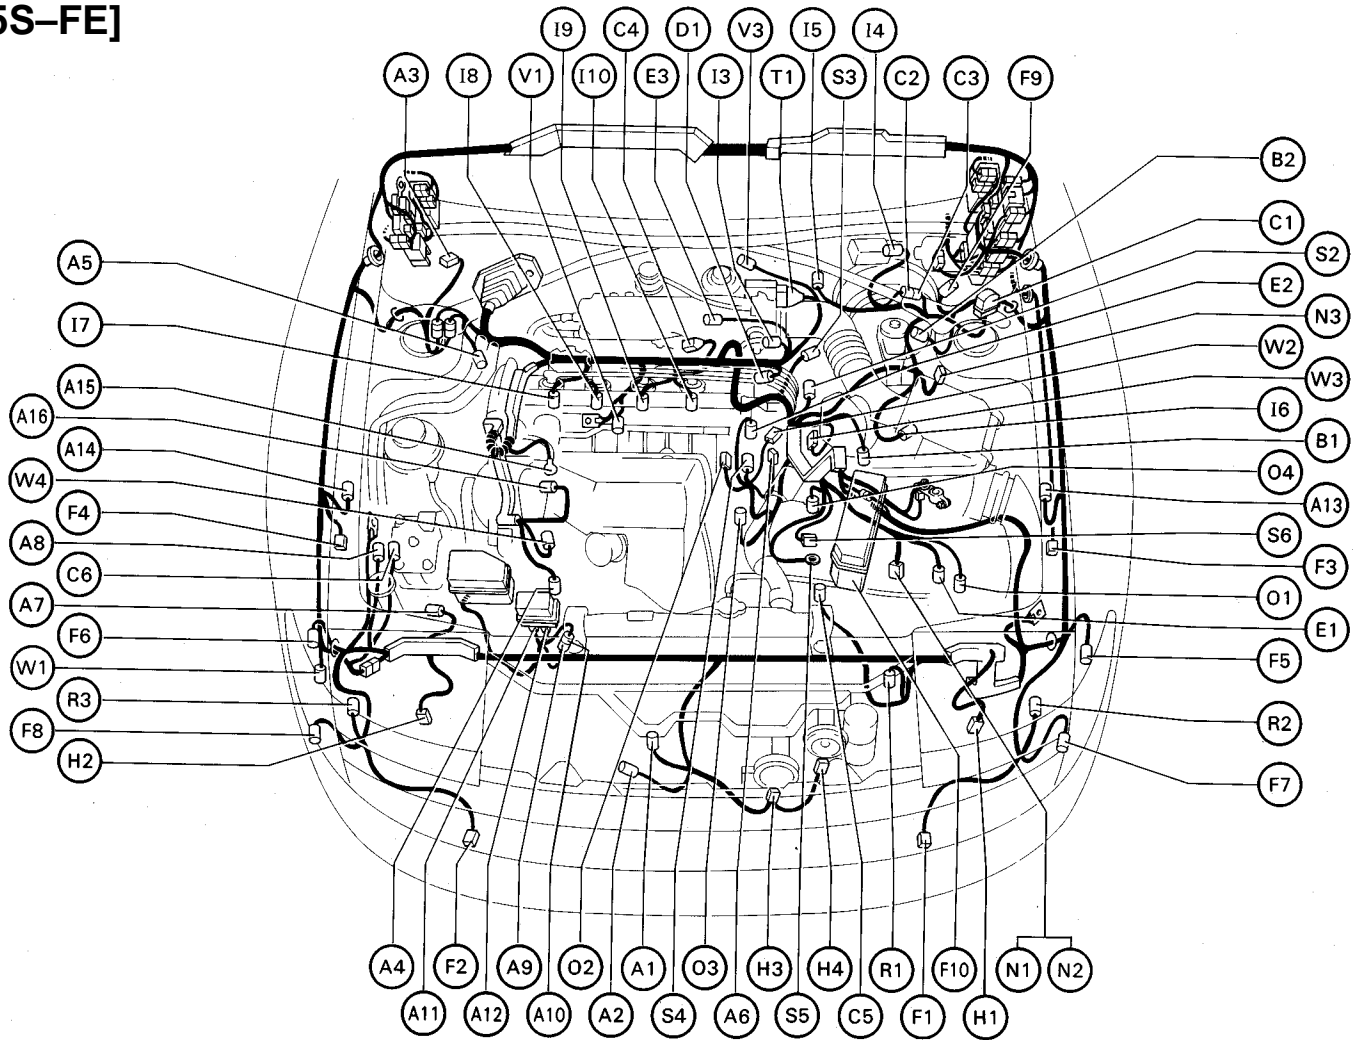

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Idle-Up VSV
- A 4 A/C Magnet Clutch
- A 5 A/C Pressure SW
- A 6 A/C Water Temp. SW
- A 7 ABS Actuator
- A 8 ABS Actuator
- A 9 ABS Check Connector
- A 10 ABS Check Connector
- A 11 ABS Relay
- A 12 ABS Relay
- A 13 ABS Speed Sensor Front LH
- A 14 ABS Speed Sensor Front RH
- A 15 Alternator
- A 16 Alternator

- B 1 Back-Up Light SW (M/T)
- B 2 Brake Fluid level SW

- C 1 Check Connector
- C 2 Check Connector (for Fan Check)
- C 3 Check Connector (for Fan Check)
- C 4 Cold Start Injector
- C 5 Cruise Control Actuator (w/ ABS)
- C 6 Cruise Control Actuator (w/o ABS)


- D 1 Distributor
- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 3 EGR Gas Temp. Sensor (for California)

- F 1 Fog Light LH
- F 2 Fog Light RH
- F 3 Front Airbag Sensor LH
- F 4 Front Airbag Sensor RH
- F 5 Front Side Marker Light LH
- F 6 Front Side Marker Light RH
- F 7 Front Turn Signal Light and Clearance Light LH
- F 8 Front Turn Signal Light and Clearance Light RH
- F 9 Front Wiper Motor
- F 10 Fusible Link Box

- H 1 Headlight LH
- H 2 Headlight RH
- H 3 Horn LH
- H 4 Horn RH

## Position of Parts in Engine Compartment


**[4A-FE]**

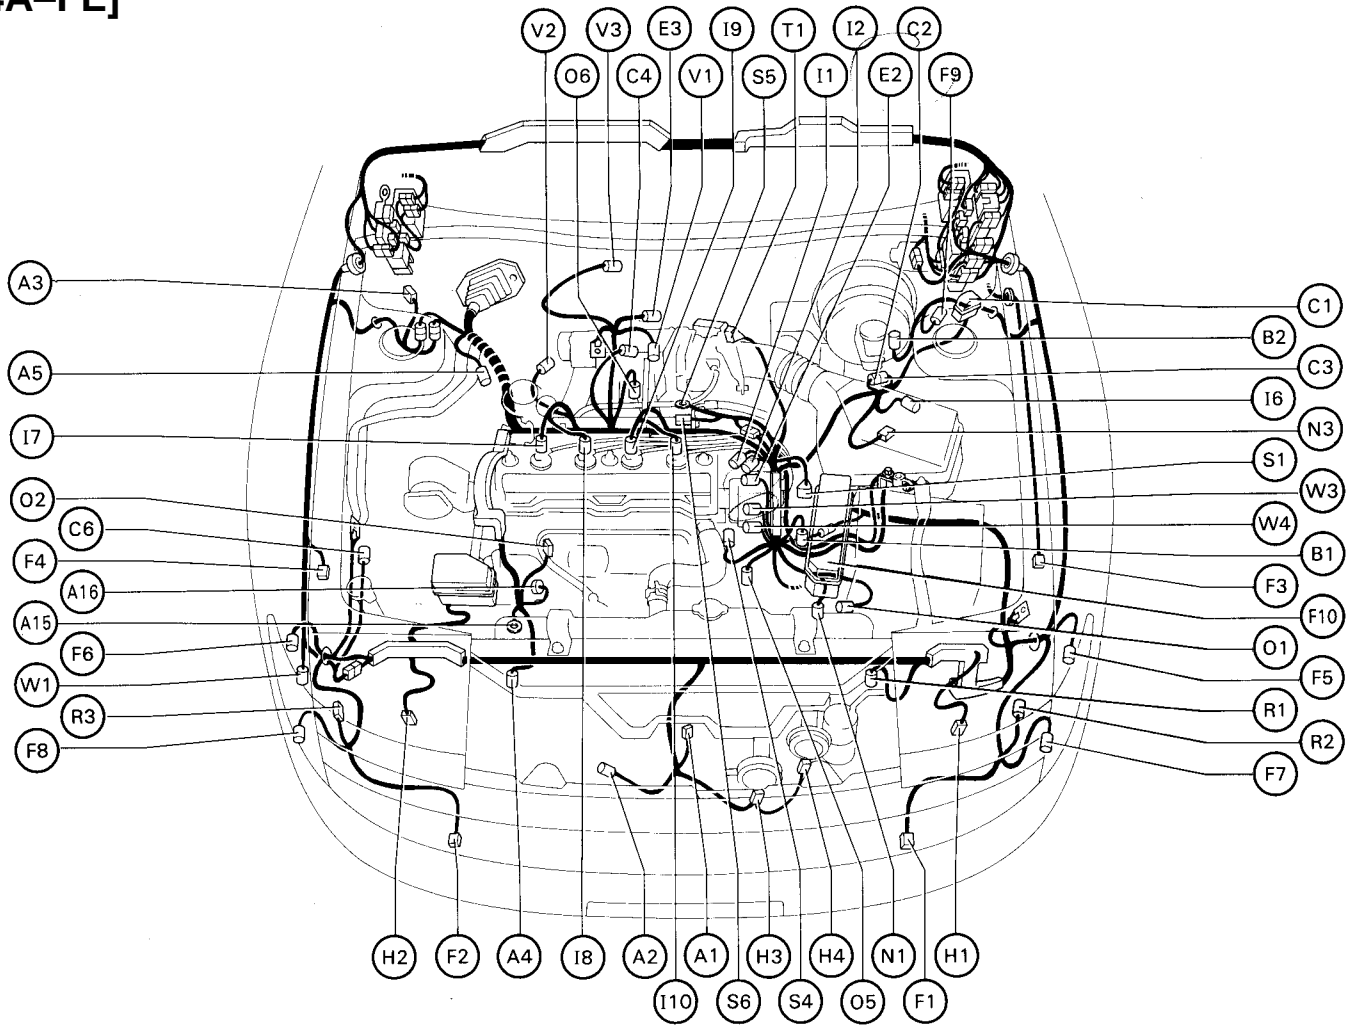

- |  |   |
|--|---|
| <p>I 1 IIA<br/>                     I 2 IIA<br/>                     I 3 ISC Valve<br/>                     I 4 Igniter<br/>                     I 5 Ignition Coil<br/>                     I 6 In-Air Temp. Sensor<br/>                     I 7 Injector No.1<br/>                     I 8 Injector No.2<br/>                     I 9 Injector No.3<br/>                     I 10 Injector No.4</p> | <p>R 1 Radiator Fan Motor<br/>                     R 2 Retract Motor LH<br/>                     R 3 Retract Motor RH</p>   |
| <p>N 1 Neutral Start SW and Back-Up Light SW<br/>                     (w/o ECT of A/T)<br/>                     N 2 Neutral Start SW, Back-Up Light SW and<br/>                     A/T Indicator (w/ ECT of A/T)<br/>                     N 3 Noise Filter (for Ignition System)</p>  | <p>S 1 Speed Sensor (for Cruise Control System)<br/>                     S 2 Speed Sensor (for ECT)<br/>                     S 3 Speed Sensor (for Cruise Control System)<br/>                     S 4 Start injector Time SW<br/>                     S 5 Starter<br/>                     S 6 Starter</p>   |
| <p>O 1 O/D Solenoid<br/>                     O 2 Oil Pressure SW<br/>                     O 3 Oxygen Sensor (Main)<br/>                     O 4 Oxygen Sensor (Sub)<br/>                     O 5 Oxygen Sensor (for California)<br/>                     O 6 Oxygen Sensor (for Ex. California)</p>  | <p>T 1 Throttle Position Sensor</p> <p>V 1 VSV (for EGR System)<br/>                     V 2 VSV (for Electrical Idle-Up System)<br/>                     V 3 Vacuum Sensor</p> <p>W 1 Washer Motor<br/>                     W 2 Water Temp. SW (for O/D System)<br/>                     W 3 Water Temp. Sender<br/>                     W 4 Water Temp. SW (for Fans Control)</p> |

# ELECTRICAL WIRING ROUTING

## Position of Parts in Instrument Panel

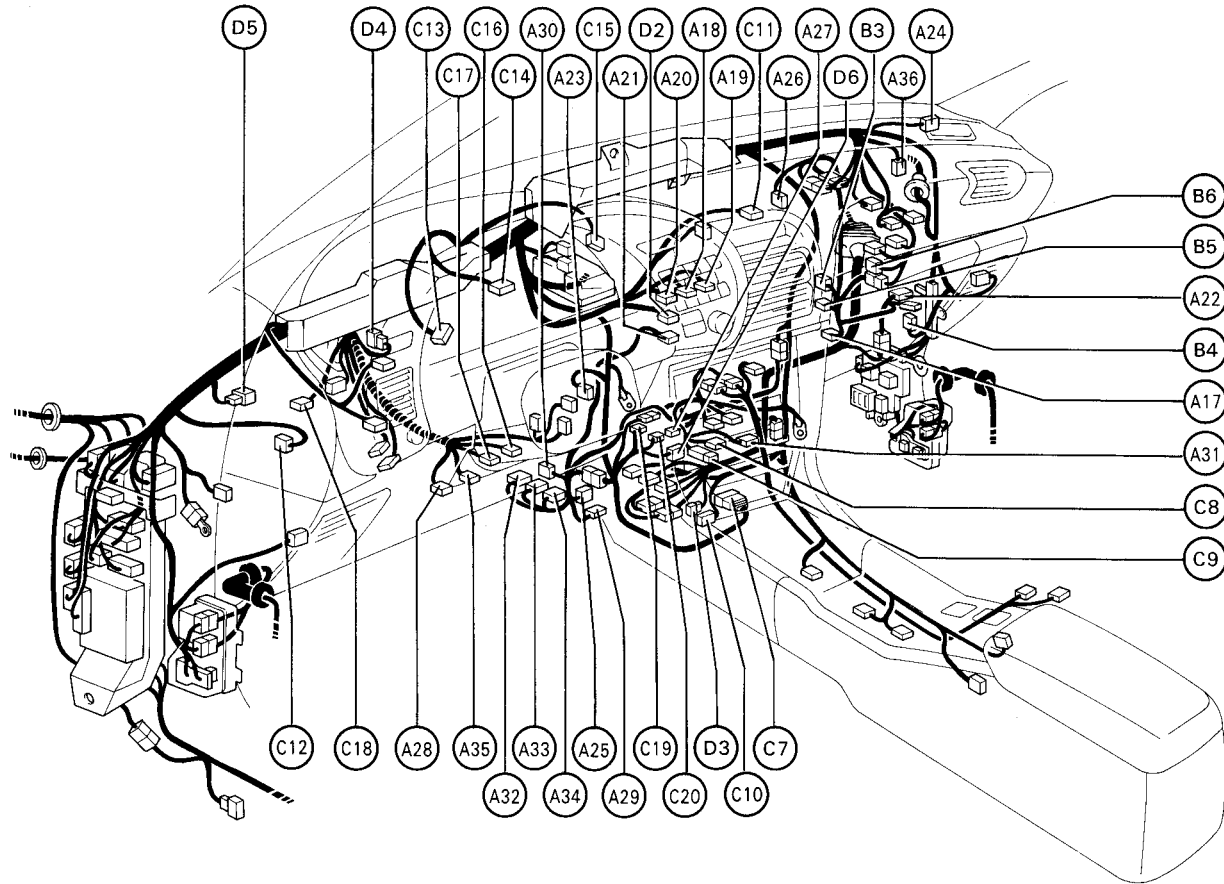


- A 17 A/C Amplifier
- A 18 A/C Control Assembly
- A 19 A/C Control Assembly
- A 20 A/C Control Assembly
- A 21 A/C Control Assembly
- A 22 A/C Power Transistor
- A 23 A/C Room Temp. Sensor
- A 24 A/C Solar Sensor
- A 25 A/C System Amplifier
- A 26 A/C Thermistor
- A 27 A/C Water Temp. Sensor
- A 28 Airbag Squib
- A 29 Air Mix Control Servo Motor
- A 30 Air Vent Mode Control Servo Motor
- A 31 Ashtray
- A 32 Auto A/C Amplifier
- A 33 Auto A/C Amplifier
- A 34 Auto A/C Amplifier
- A 35 Auto Tilt Away Actuator
- A 36 Auto Tilt Away ECU

- B 3 Blower Control Relay
- B 4 Blower Motor
- B 5 Blower Resistor
- B 6 Blower Resistor

- C 7 Center Airbag Sensor Assembly
- C 8 Cigarette Lighter
- C 9 Cigarette Lighter Illumination
- C 10 Circuit Opening Relay
- C 11 Clock
- C 12 Clutch Start SW
- C 13 Combination Meter
- C 14 Combination Meter
- C 15 Combination Meter
- C 16 Combination SW
- C 17 Combination SW
- C 18 Cruise Control Clutch SW
- C 19 Cruise Control ECU
- C 20 Cruise Control ECU
- D 2 Defogger SW
- D 3 Diode (for O/D System)
- D 4 Diode (for Cruise Control System)
- D 5 Diode (for Key Off)
- D 6 Door Lock ECU

## Position of Parts in Instrument Panel

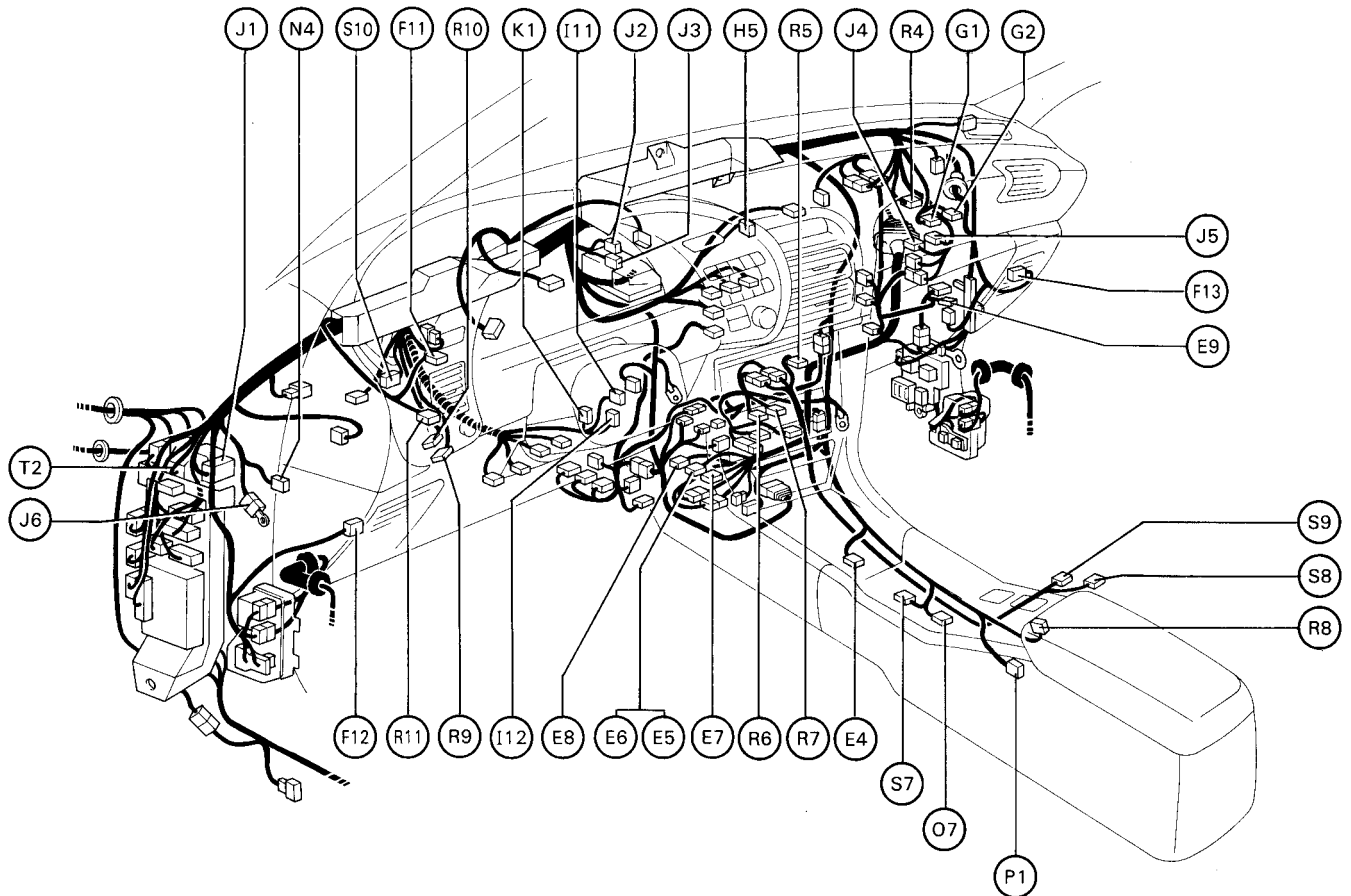


- |      |                                   |      |   |
|------|-----------------------------------|------|---|
| E 4  | ECT Pattern Select SW             | K 1  | Key Inter Lock Solenoid   |
| E 5  | Engine ECU (4A-FE)                | N 4  | Noise Filter (for Defogger System)  |
| E 6  | Engine and ECT ECU (5S-FE)        | O 7  | O/D Main SW   |
| E 7  | Engine and ECT ECU (5S-FE)        | P 1  | Parking Brake SW  |
| E 8  | Engine and ECT ECU                | R 4  | RECIRC/FRESH Control Servo Motor  |
| E 9  | Extra High Speed Relay            | R 5  | Radio and Player (w/ CD Player)   |
| F 11 | Fog Light SW                      | R 6  | Radio and Player (w/o CD Player)  |
| F 12 | Front Speaker LH                  | R 7  | Radio and Player (w/o CD Player)  |
| F 13 | Front Speaker RH                  | R 8  | Remote Control Mirror SW  |
| G 1  | Glove Box Light                   | R 9  | Retract Control Relay   |
| G 2  | Glove Box Light SW                | R 10 | Retract Control Relay (for CANADA)  |
| H 5  | Hazard SW                         | R 11 | Rheostat  |
| I 11 | Ignition Key Cylinder Light       | S 7  | Shift Lock ECU  |
| I 12 | Ignition SW and Unlock Warning SW | S 8  | Stereo Component Amplifier (w/ CD Player)   |
| J 1  | Junction Connector                | S 9  | Stereo Component Amplifier (w/ CD Player)   |
| J 2  | Junction Connector                | S 10 | Stop Light SW (w/o Cruise Control System) or<br>Stop Light and Cruise Control Stop SW |
| J 3  | Junction Connector                | T 2  | Turn Signal Flasher   |
| J 4  | Junction Connector                |      |   |
| J 5  | Junction Connector                |      |   |
| J 6  | Junction Connector (for Earth)    |      |   |

# ELECTRICAL WIRING ROUTING

## Position of Parts in Body

[L/B]

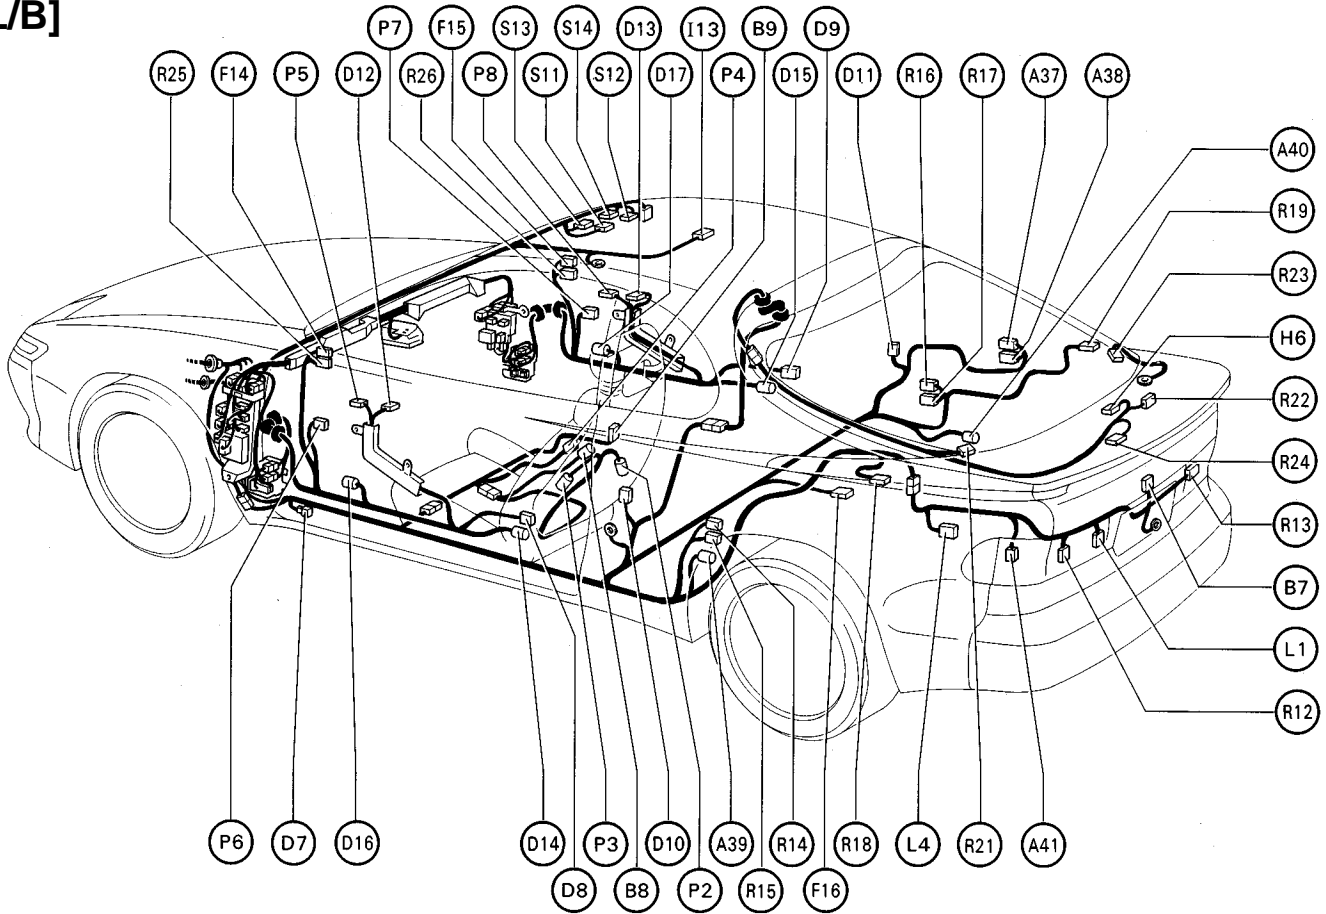


- A 37 ABS ECU
- A 38 ABS ECU
- A 39 ABS Speed Sensor Rear LH
- A 40 ABS Speed Sensor Rear RH
- A 41 Auto Antenna Control Relay and Motor
  
- B 7 Back Door Courtesy SW
- B 8 Buckle SW (w/ Power Seat)
- B 9 Buckle SW (w/o Power Seat)
  
- D 7 Diode (for Interior Light System)
- D 8 Door Courtesy Light LH
- D 9 Door Courtesy Light RH
- D 10 Door Courtesy SW LH
- D 11 Door Courtesy SW RH

- D 12 Door Lock Control SW LH
- D 13 Door Lock Control SW RH
- D 14 Door Lock Motor LH and, Key Lock and Unlock SW LH
- D 15 Door Lock Motor RH and, Key Lock and Unlock SW RH
- D 16 Door Speaker LH
- D 17 Door Speaker RH
  
- F 14 Front Tweeter (Speaker) LH
- F 15 Front Tweeter (Speaker) RH
- F 16 Fuel Pump and Fuel Sender
  
- H 6 High Mount Stop Light
  
- I 13 Interior Light

## Position of Parts in Body

[C/P]

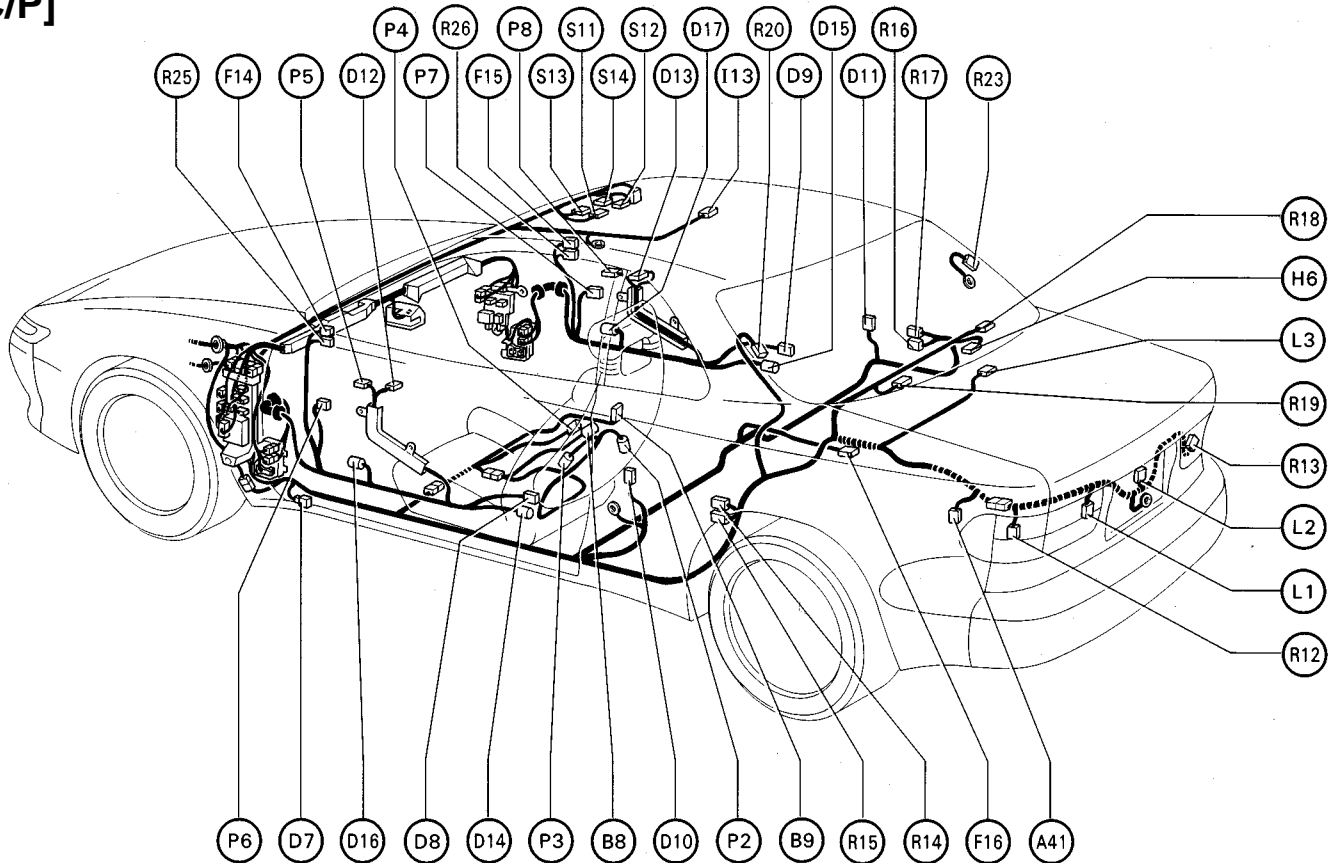


- |   |   |
|---|---|
| <p>L 1 License Plate Light</p> <p>L 2 Luggage Compartment Door Courtesy SW (C/P)</p> <p>L 3 Luggage Compartment Light (C/P)</p> <p>L 4 Luggage Compartment Light (L/B)</p> <p>P 2 Power Seat Motor (for Lumbar Support)</p> <p>P 3 Power Seat Motor (for Side Support)</p> <p>P 4 Power Seat SW</p> <p>P 5 Power Window Master SW</p> <p>P 6 Power Window Motor LH</p> <p>P 7 Power Window Motor RH</p> <p>P 8 Power Window SW RH</p> <p>R 12 Rear Combination Light LH</p> <p>R 13 Rear Combination Light RH</p> <p>R 14 Rear Speaker LH</p> <p>R 15 Rear Speaker LH</p> <p>R 16 Rear Speaker RH</p> <p>R 17 Rear Speaker RH</p> | <p>R 18 Rear Tweeter (Speaker) LH</p> <p>R 19 Rear Tweeter (Speaker) RH</p> <p>R 20 Rear Window Defogger (+, C/P)</p> <p>R 21 Rear Window Defogger (+, L/B w/o Diversity Antenna)</p> <p>R 22 Rear Window Defogger (+, L/B w/ Diversity Antenna)</p> <p>R 23 Rear Window Defogger (-)</p> <p>R 24 Rear Wiper Motor and Relay</p> <p>R 25 Remote Control Mirror LH</p> <p>R 26 Remote Control Mirror RH</p> <p>S 11 Sun Roof Control Relay</p> <p>S 12 Sun Roof Control SW and Personal Light</p> <p>S 13 Sun Roof Limit SW</p> <p>S 14 Sun Roof Motor</p> |
|---|---|


# ELECTRICAL WIRING ROUTING

- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points


[5S-FE]

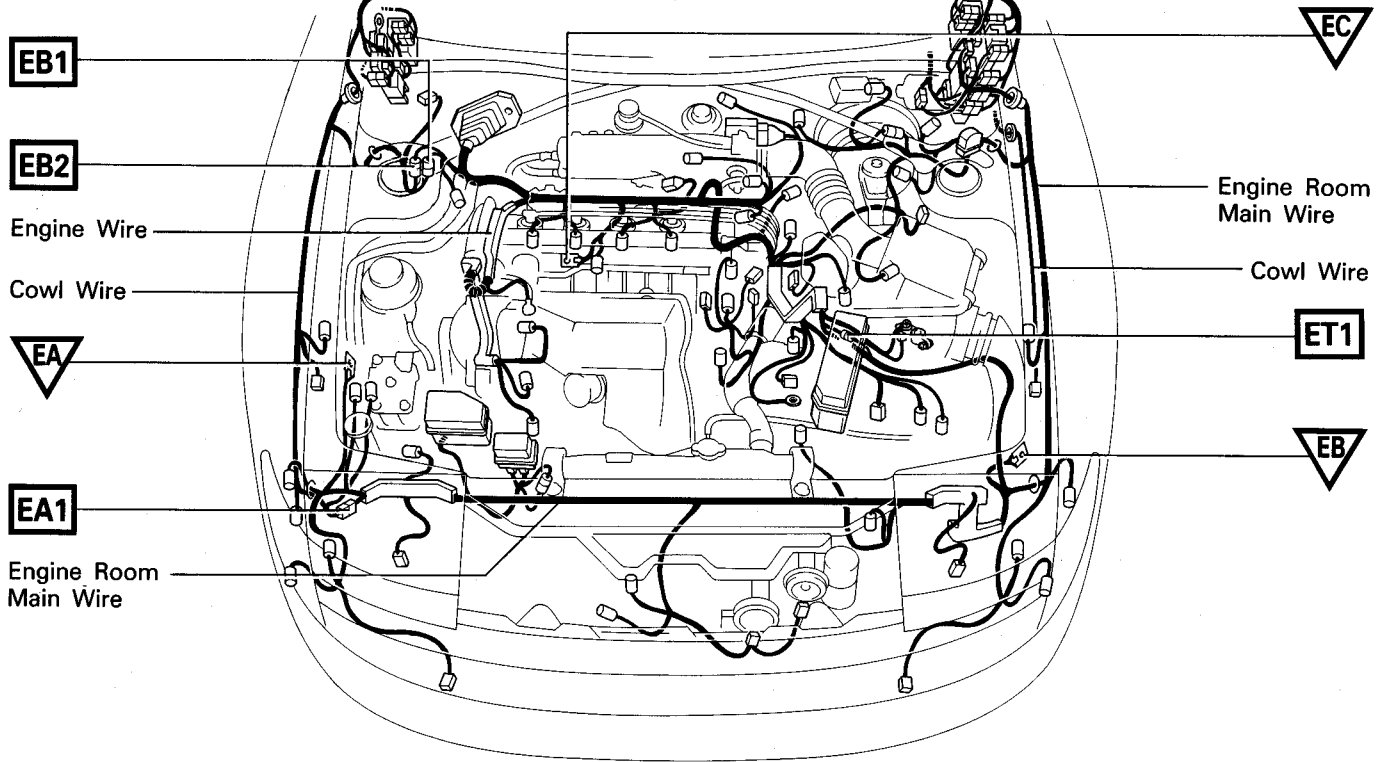

- : Location of Splice Points

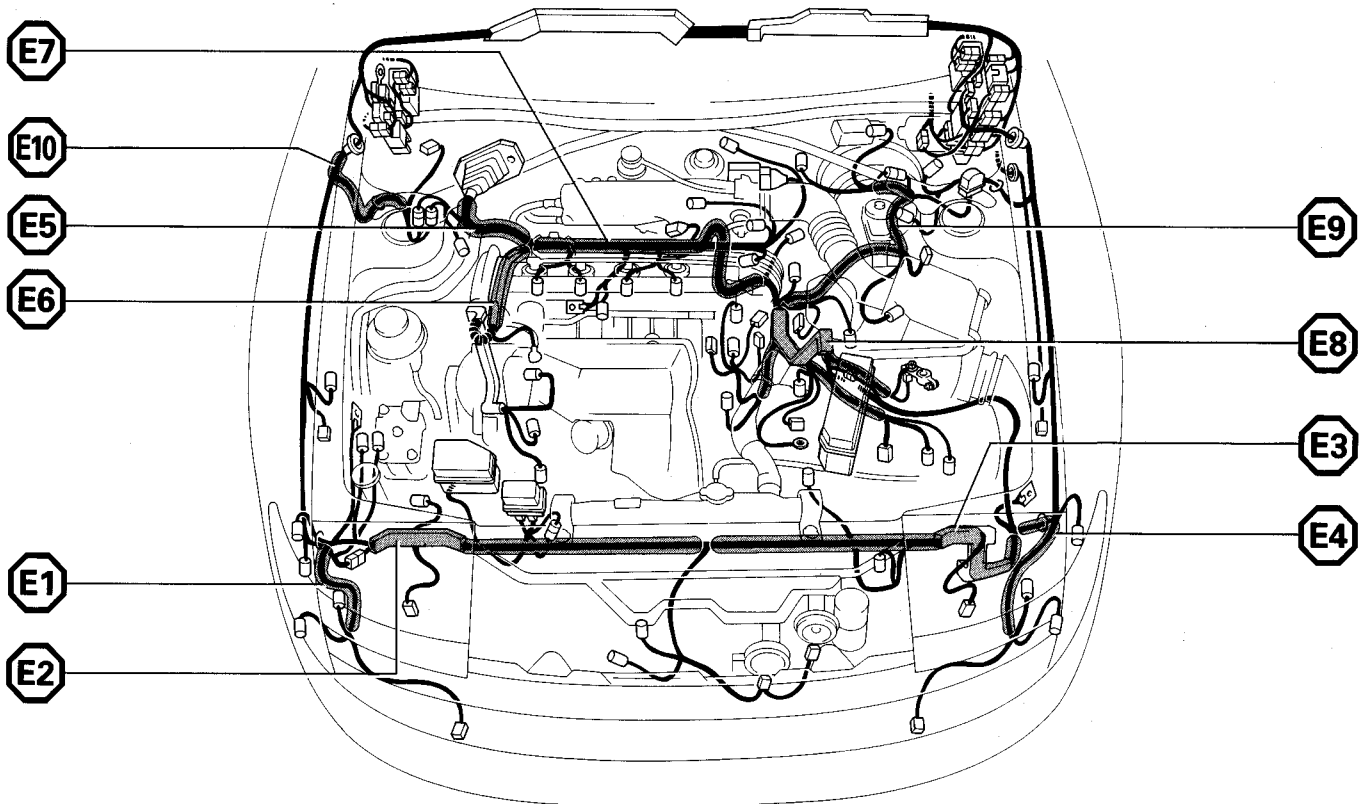

## Connector Joining Wire Harness and Wire Harness

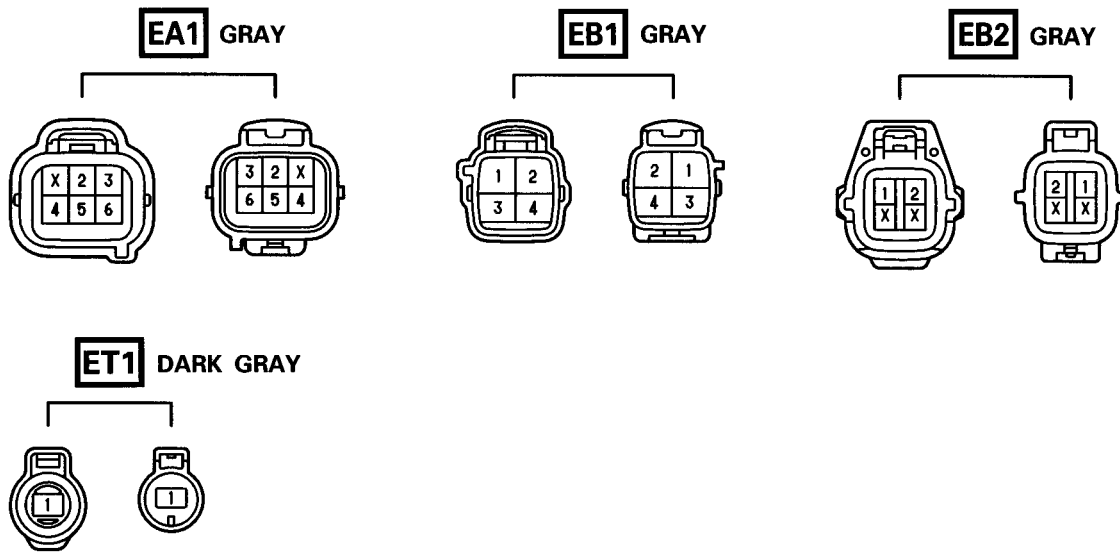


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
EB1	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
EB2	
ET1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)




# ELECTRICAL WIRING ROUTING

- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points


[4A-FE]

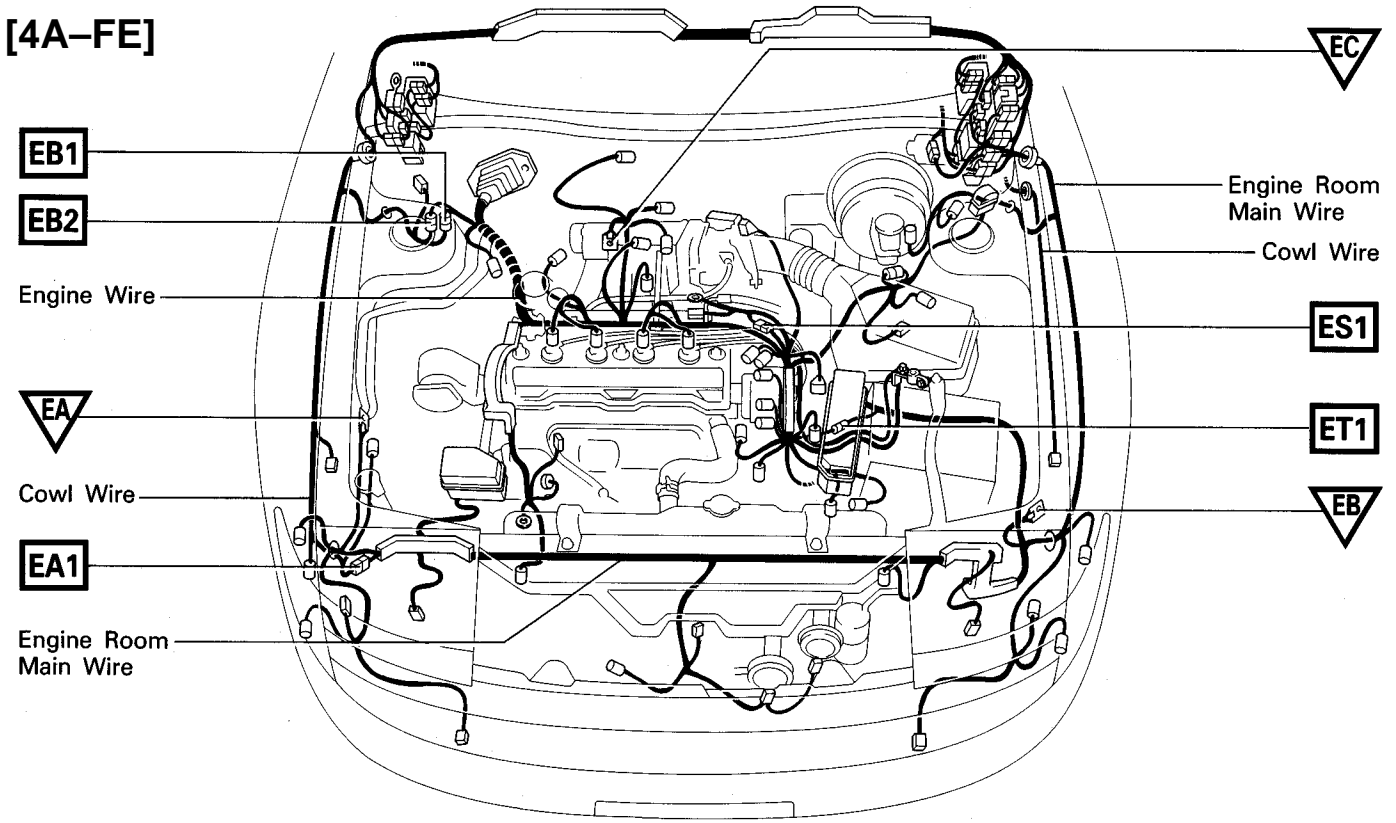

- : Location of Splice Points

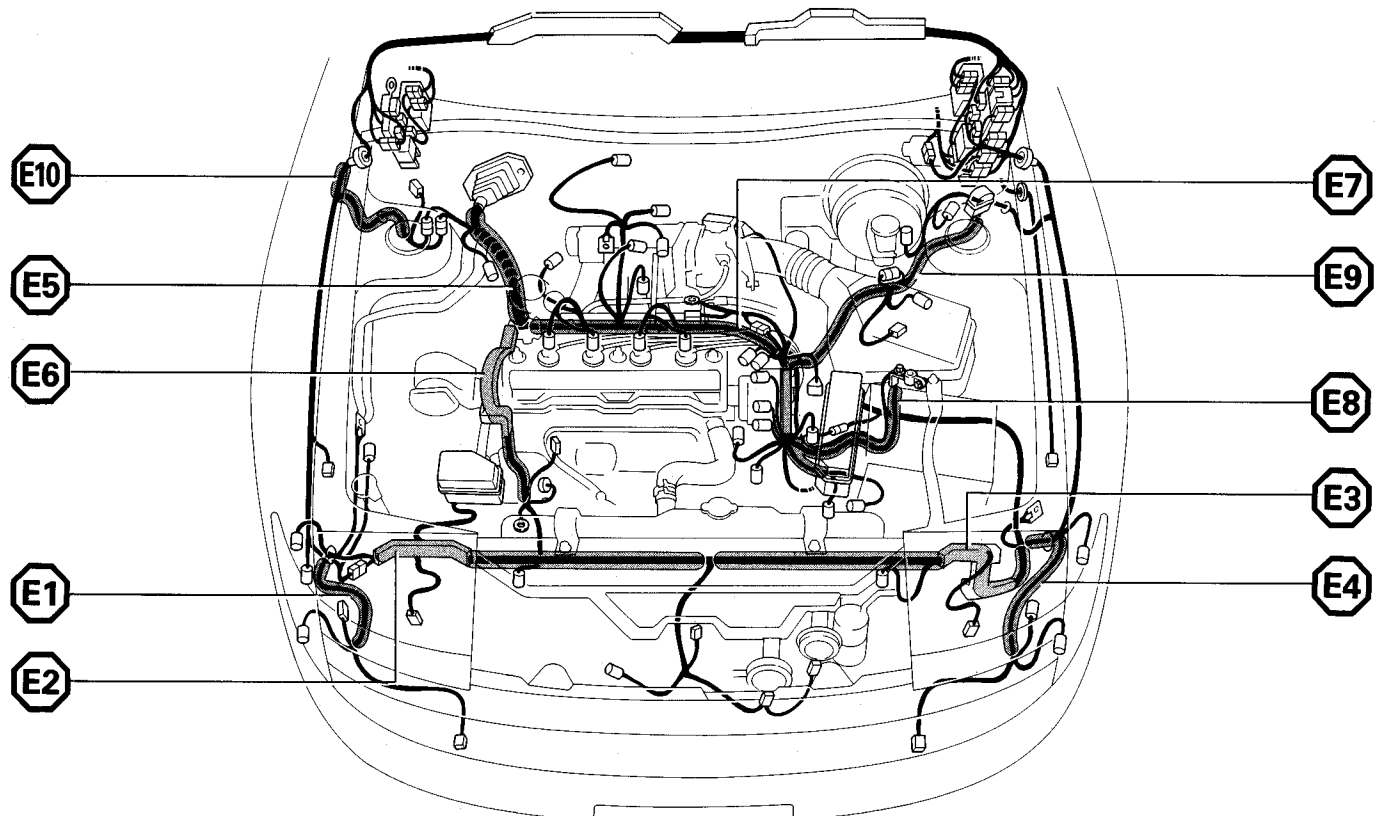

## Connector Joining Wire Harness and Wire Harness

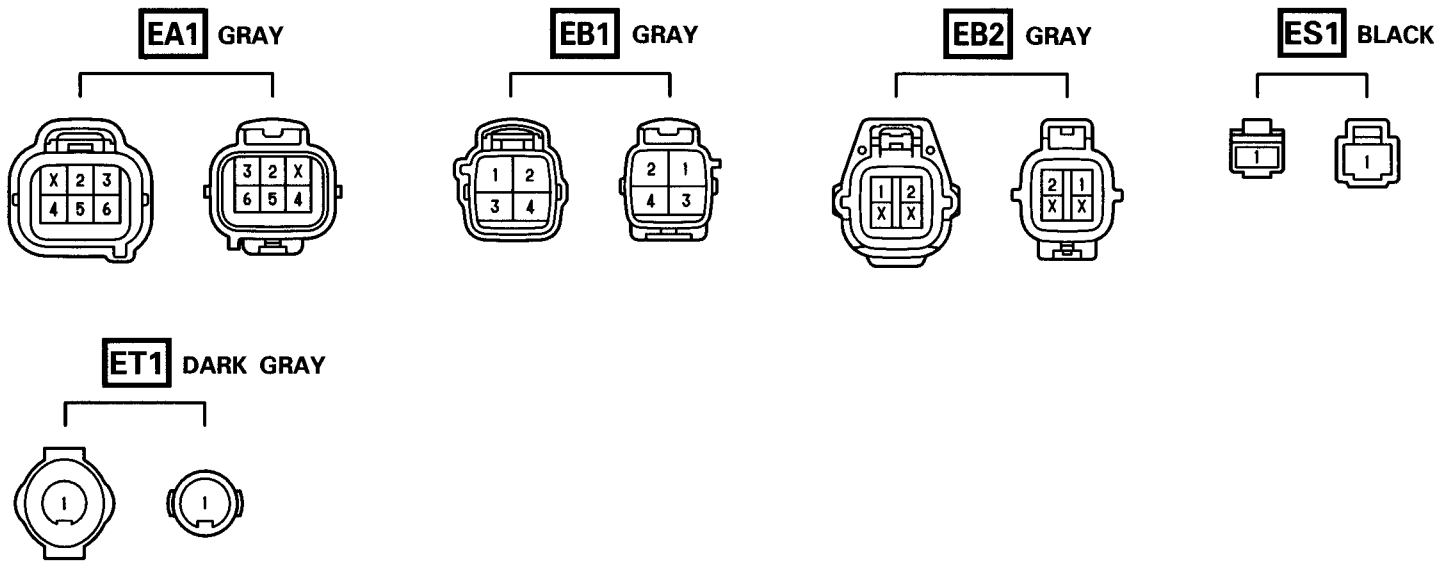


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FRONT FENDER)
EB1	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
EB2	
ES1	ENGINE WIRE AND ENGINE ROOM NO.2 WIRE (NEAR THE STARTER)
BT1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)


# ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

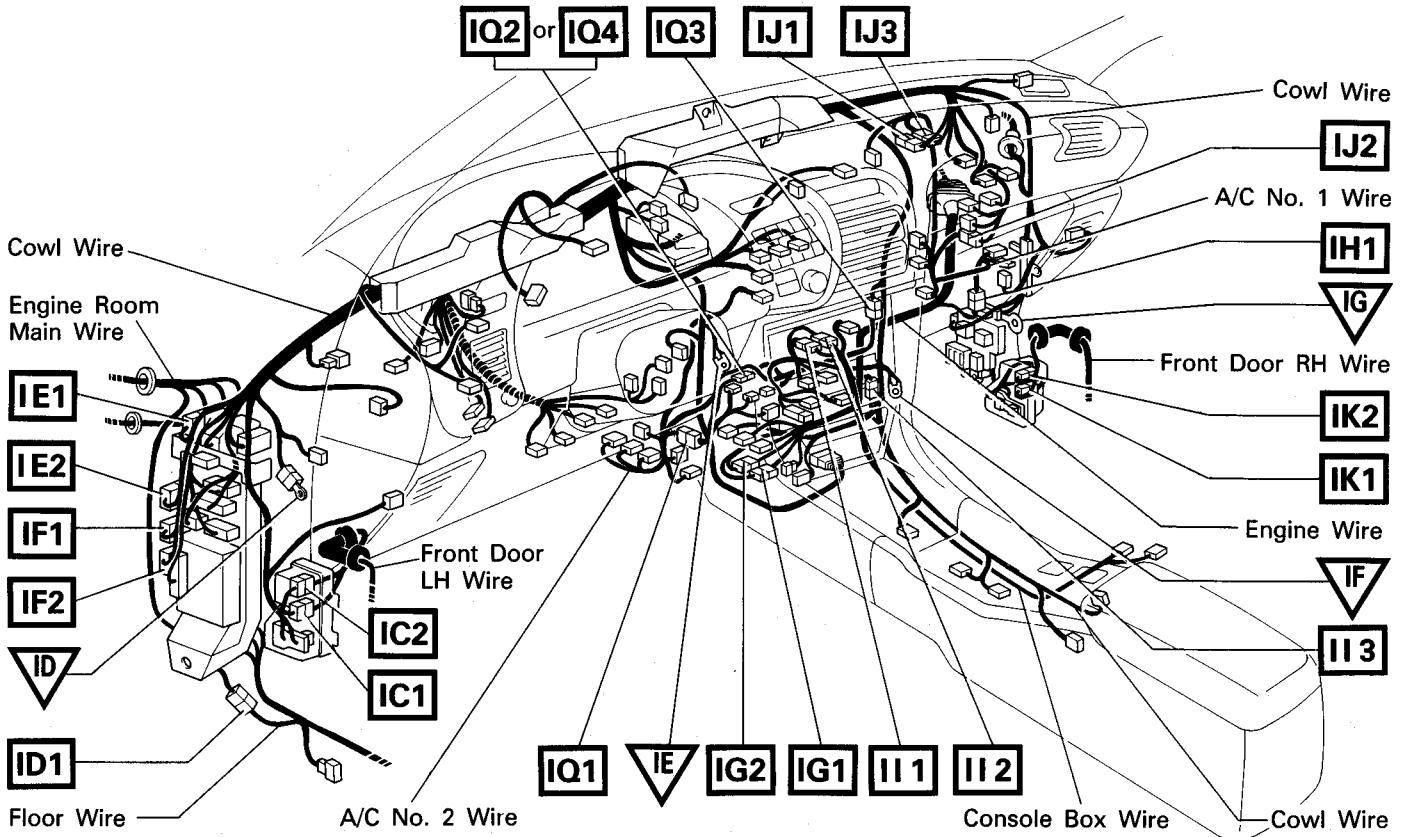

○ : Location of Splice Points

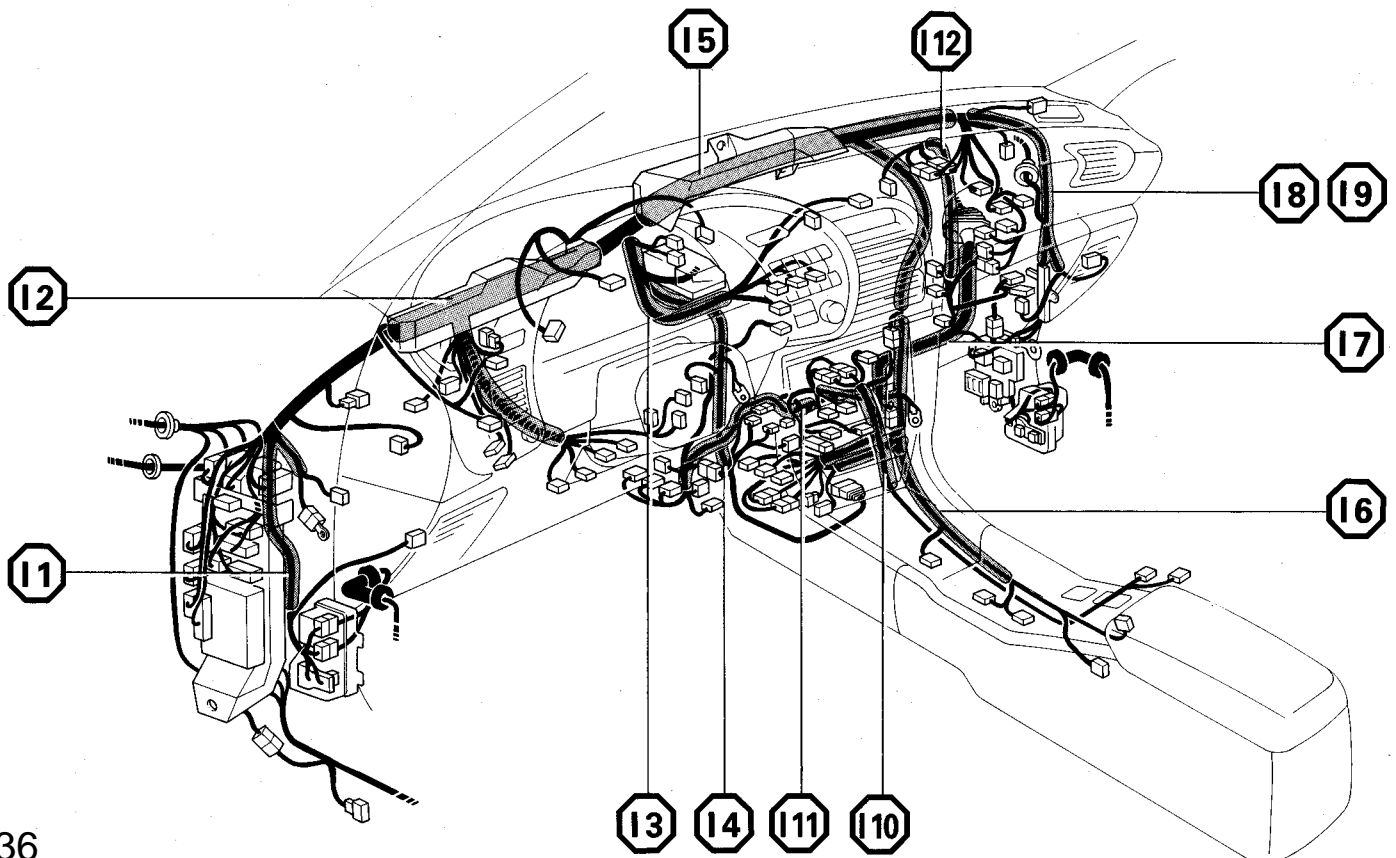


# Connector Joining Wire Harness and Wire Harness

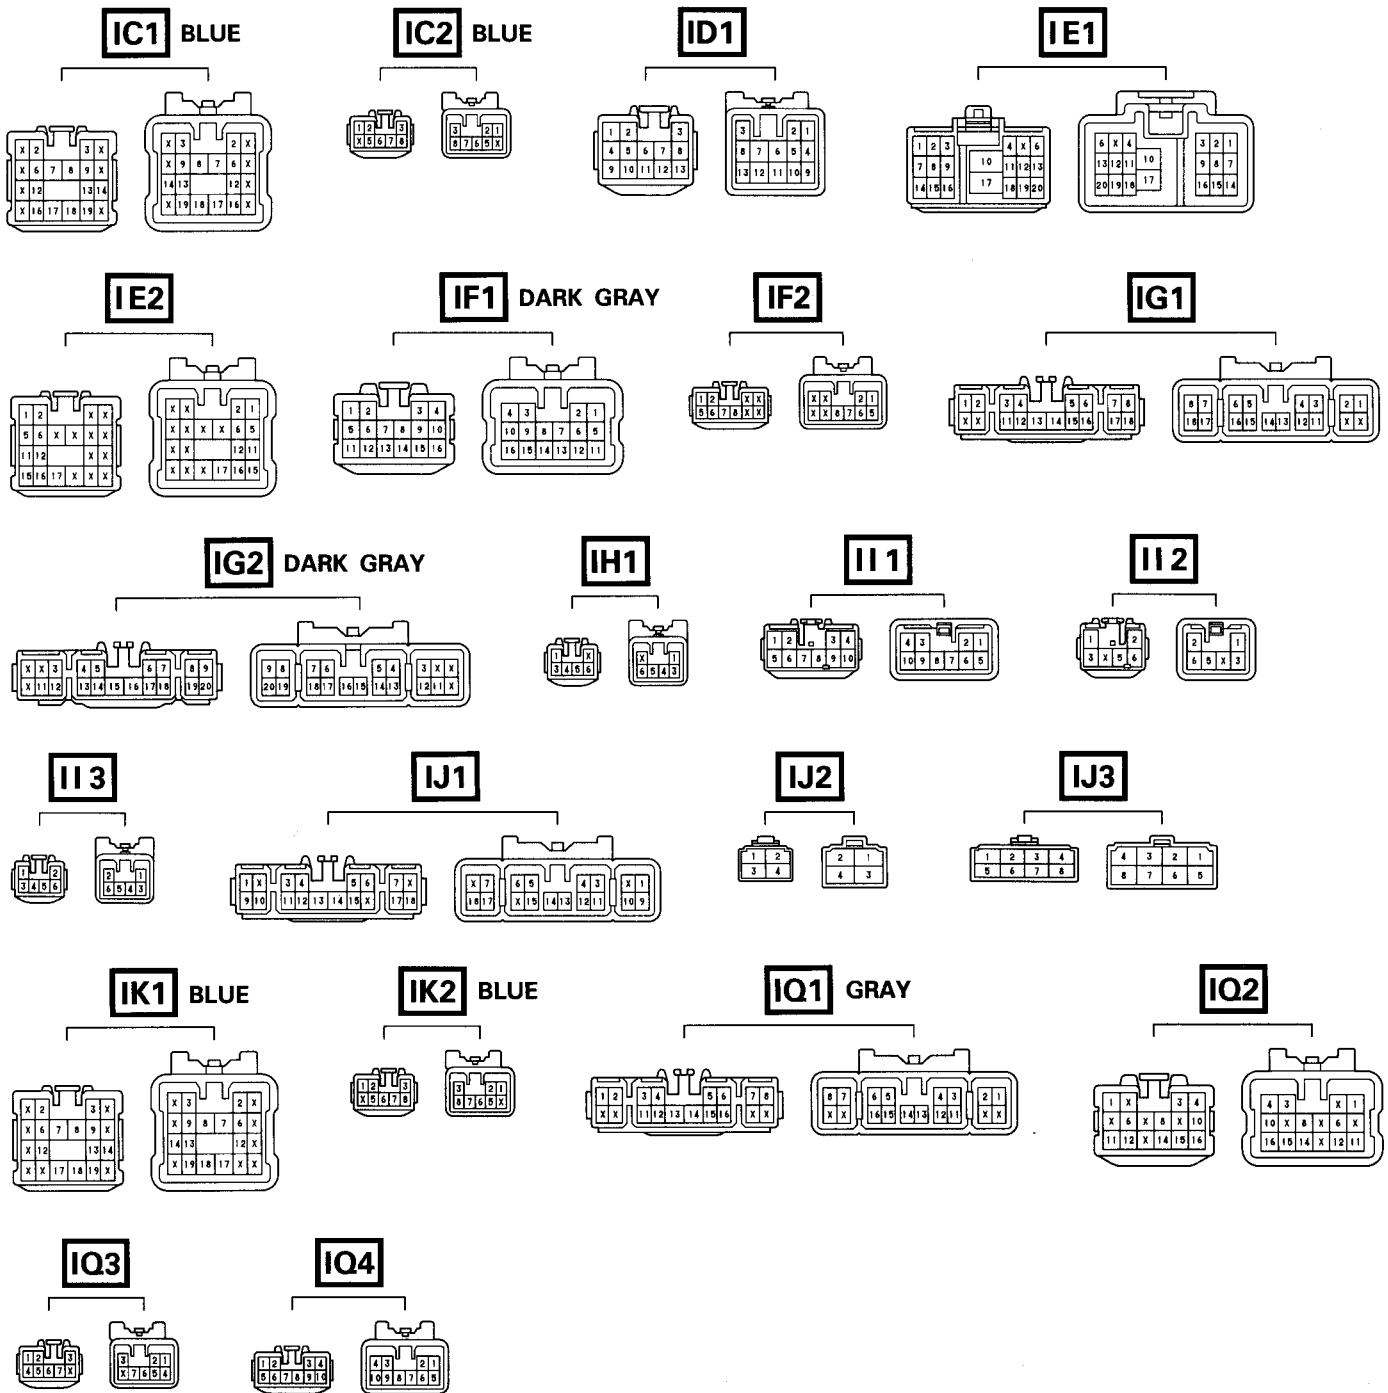


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1, IC2	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
ID1	ENGINE ROOM MAIN WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IE1, IE2	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1, IF2	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1, IG2	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IH1	ENGINE WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
II1, II2, II3	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
IJ1, IJ2, IJ3	COWL WIRE AND A/C NO. 1 WIRE (BEHIND THE GLOVE BOX)
IK1, IK2	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ1, IQ2, IQ3, IQ4	COWL WIRE AND A/C NO. 2 WIRE (BESIDE HEATER UNIT)

# ELECTRICAL WIRING ROUTING


- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points

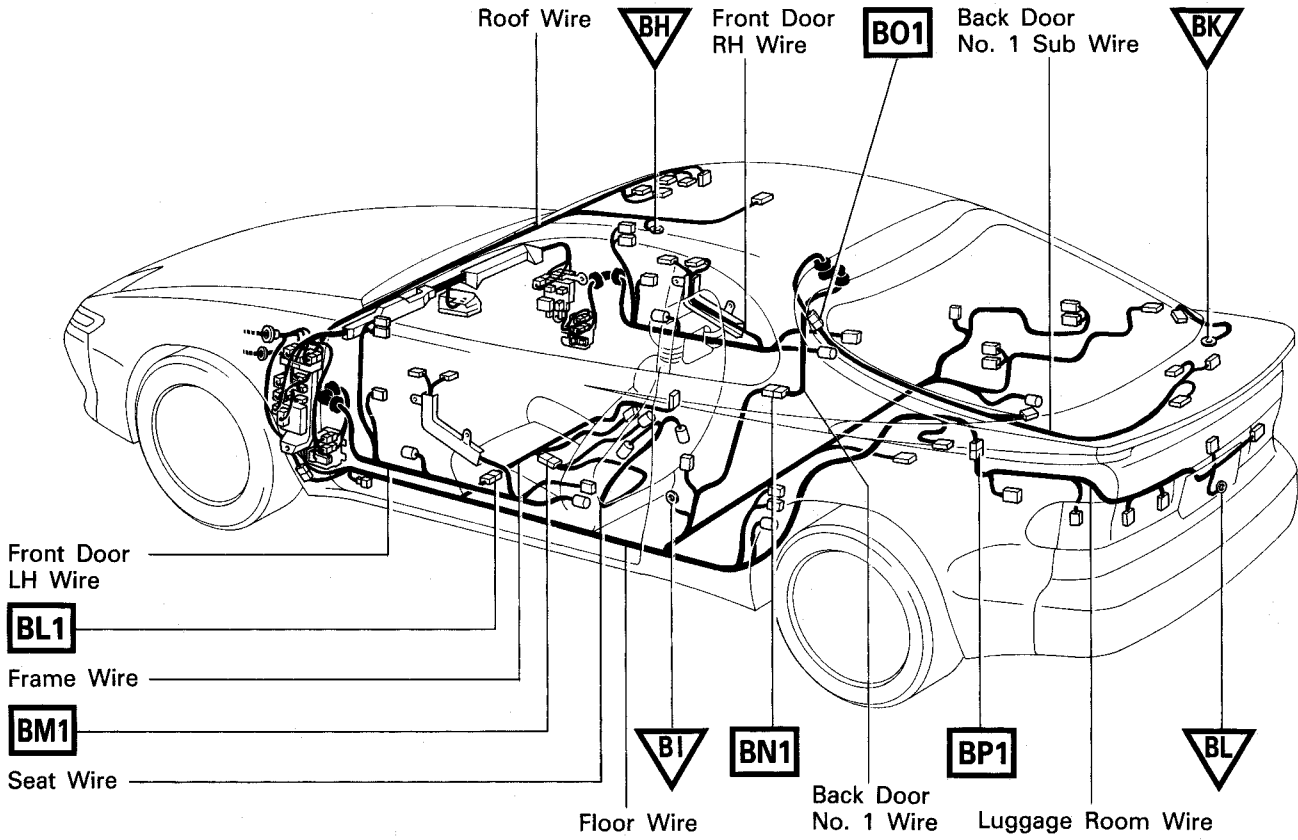

- : Location of Splice Points

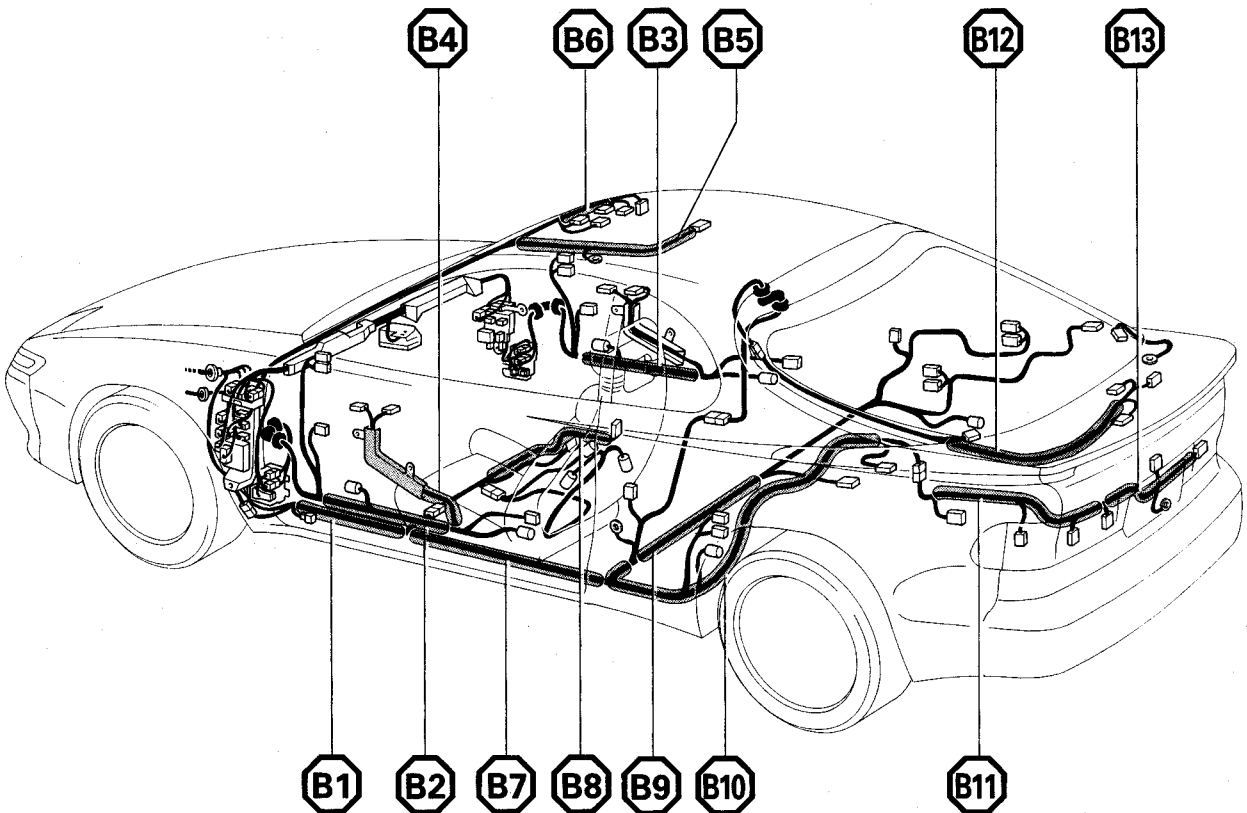


## Connector Joining Wire Harness and Wire Harness

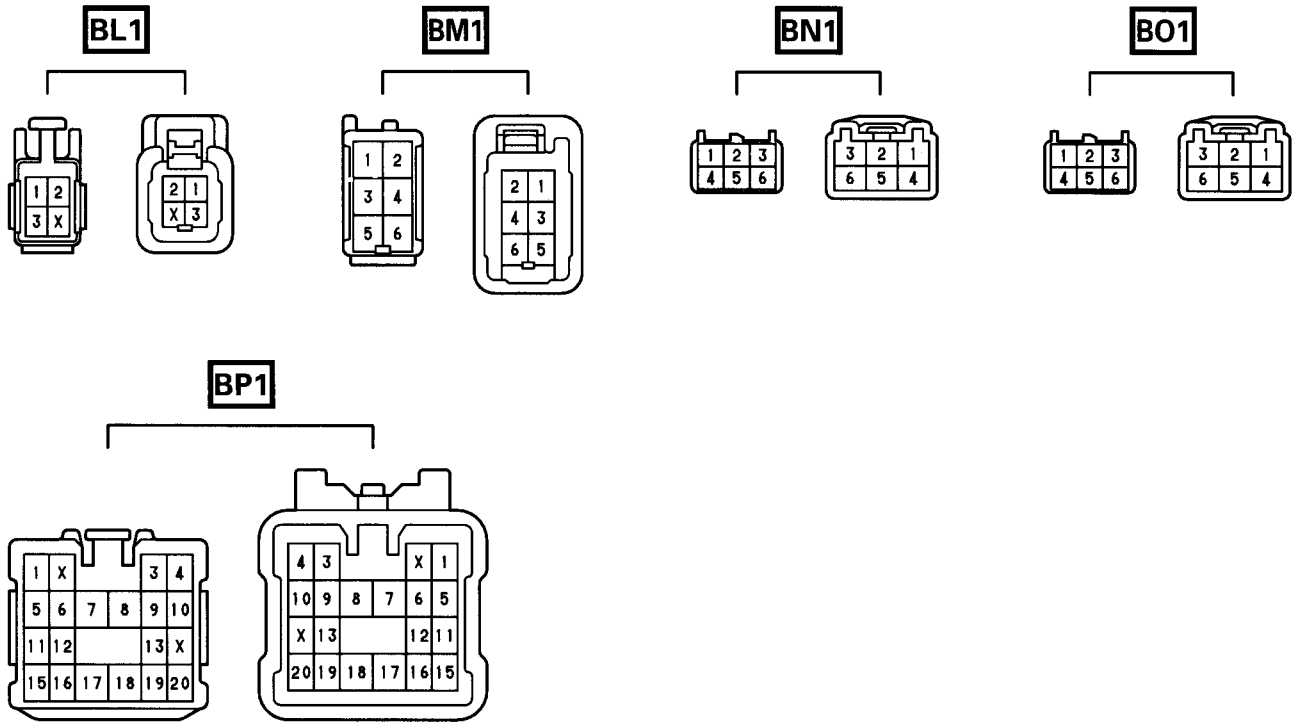


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>BL1</b>	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
<b>BM1</b>	FRAME WIRE AND SEAT WIRE (UNDER THE DRIVE'S SEAT)
<b>BN1</b>	BACK DOOR NO. 1 WIRRE AND FLOOR WIRE (LET SIDE PACKAGE TRAY TRIM)
<b>BO1</b>	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)
<b>BP1</b>	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)

# ELECTRICAL WIRING ROUTING


- : Location of Connector Joining Wire Harness and Wire Harness
- ▽ : Location of Ground Points

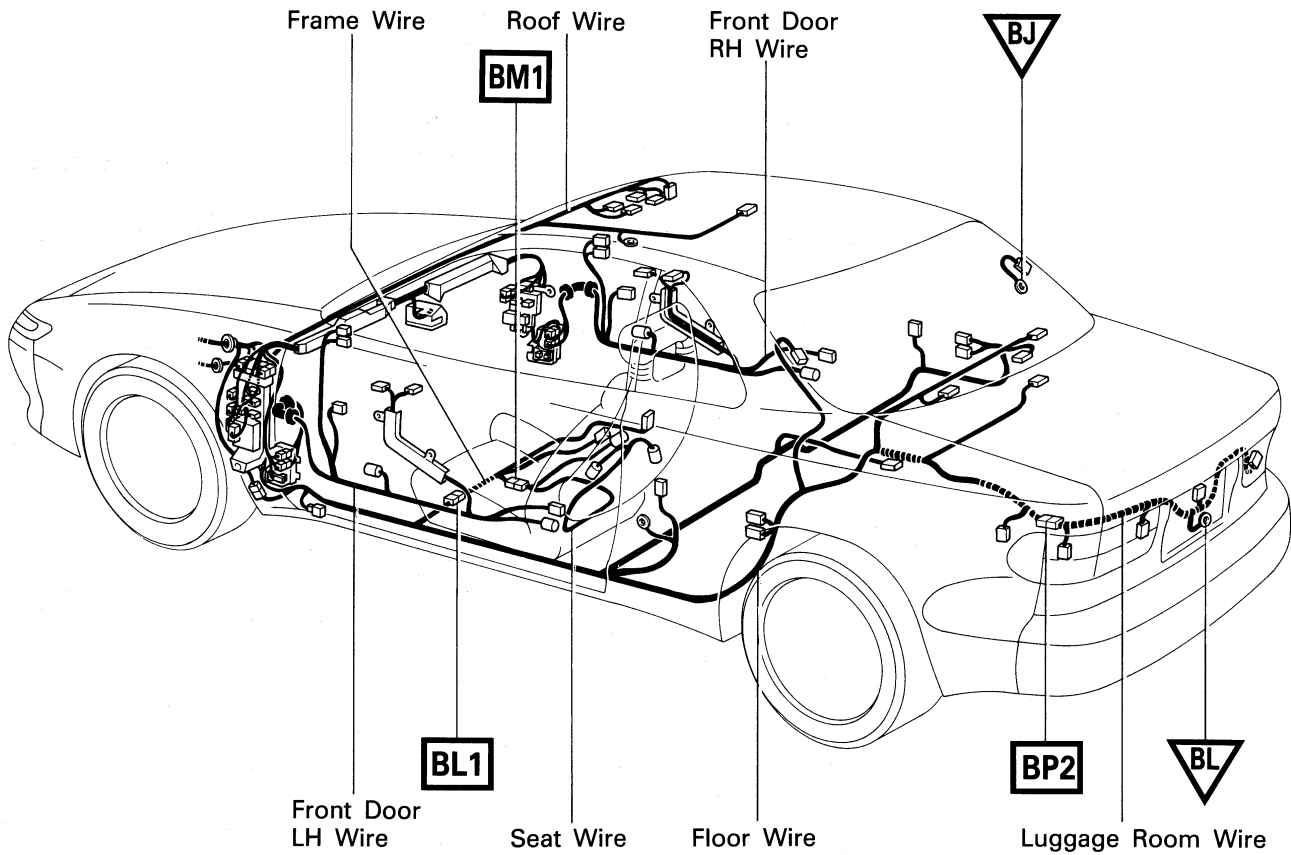

- : Location of Splice Points

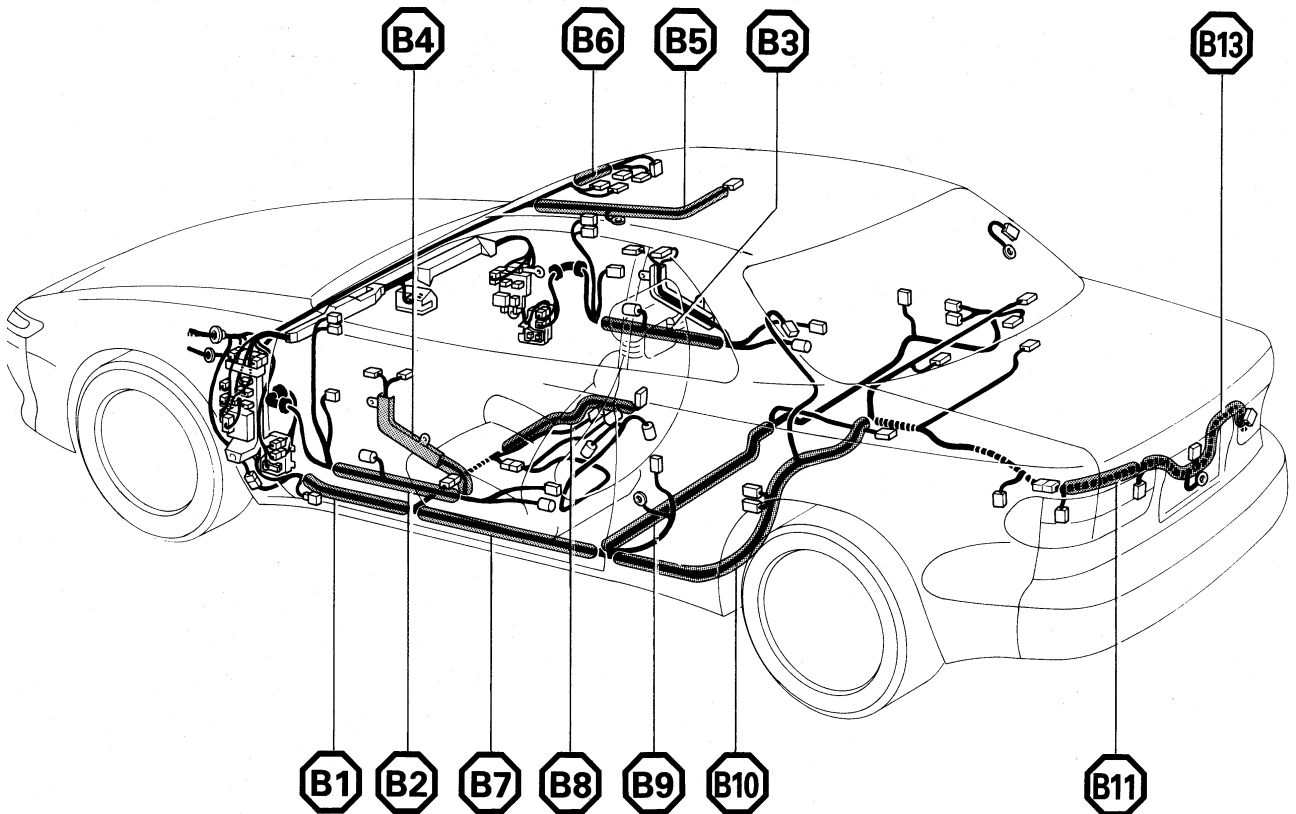

# Connector Joining Wire Harness and Wire Harness

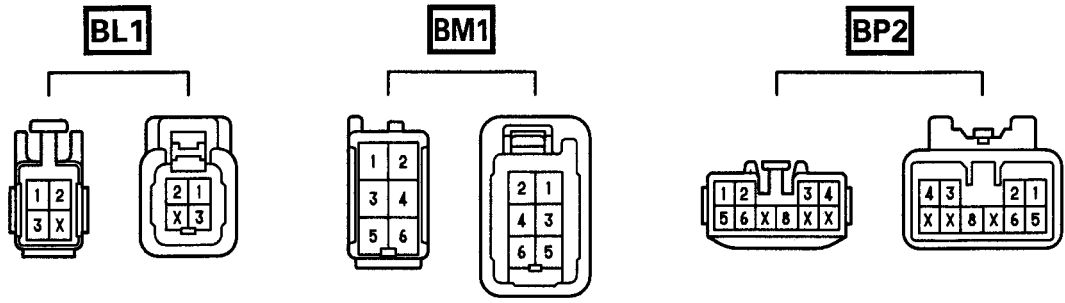

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>BL1</b>	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
<b>BP1</b>	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
<b>BP2</b>	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)