

## SERVICE HINTS

### HEADLIGHT RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
<b>C14</b>	28	<b>H 1</b>	26 (5S-FE), 27 (4A-FE)	<b>R 3</b>	26 (5S-FE), 27 (4A-FE)
<b>C16</b> A	28	<b>H 2</b>	26 (5S-FE), 27 (4A-FE)	<b>R 9</b>	29
<b>C17</b> B	28	<b>J 6</b>	29		
<b>F10</b>	26 (5S-FE), 27 (4A-FE)	<b>R 2</b>	26 (5S-FE), 27 (4A-FE)		

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
<b>1A</b>	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
<b>1E</b>		
<b>2A</b>	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
<b>2B</b>	20	ENGINE WIRE AND J/B NO. 2 (NEAR THE BATTERY)
<b>2D</b>	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
<b>2E</b>		
<b>3B</b>	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS









CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>IE1</b>	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
<b>EB</b>	34 (5S-FE) 34 (4A-FE)	FRONT LEFT FENDER
<b>ID</b>	36	LEFT KICK PANEL

### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
<b>E 2</b>	32 (5S-FE)	ENGINE ROOM MAIN WIRE	<b>E 4</b>	32 (5S-FE)	ENGINE ROOM MAIN WIRE
	34 (4A-FE)			34 (4A-FE)	
<b>E 3</b>	32 (5S-FE)		<b>I 1</b>	36	COWL WIRE
	34 (4A-FE)		<b>I 2</b>		

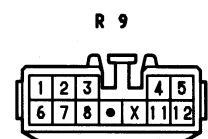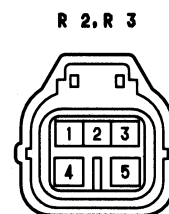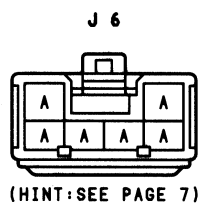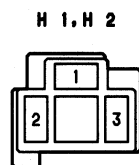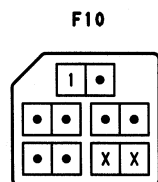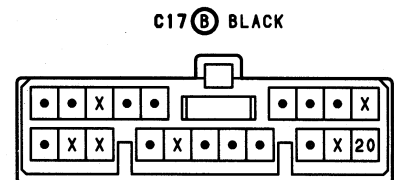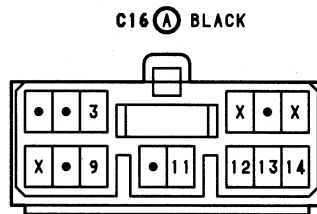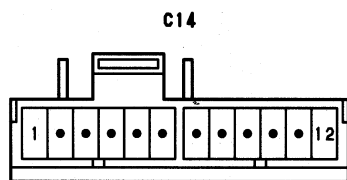

# HEADLIGHT (USA)

Δ W/ CRUISE CONTROL AND ABS  
 ○ EX. W/ CRUISE CONTROL AND ABS

