



ILLUMINATION

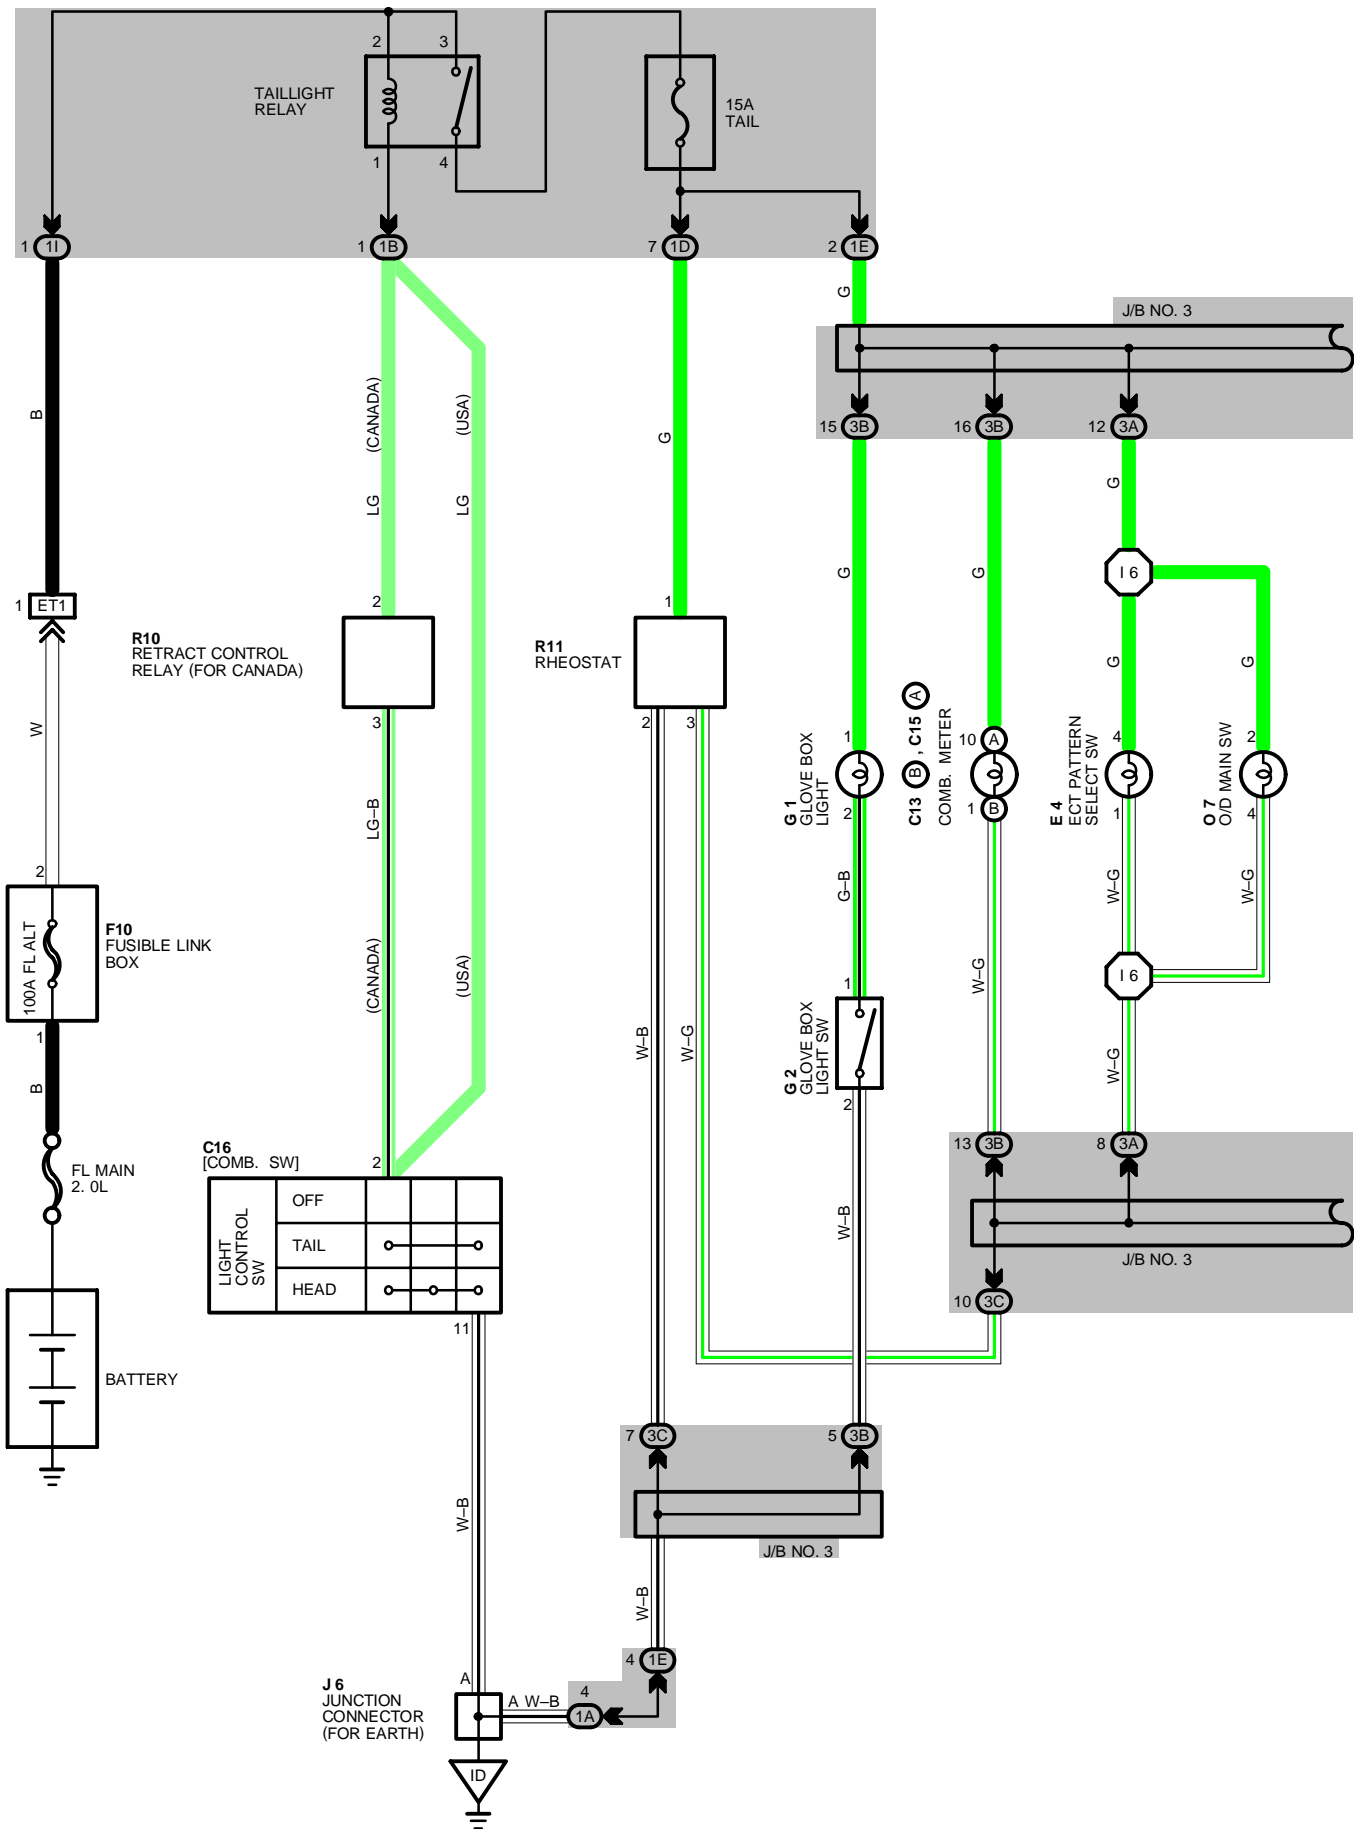

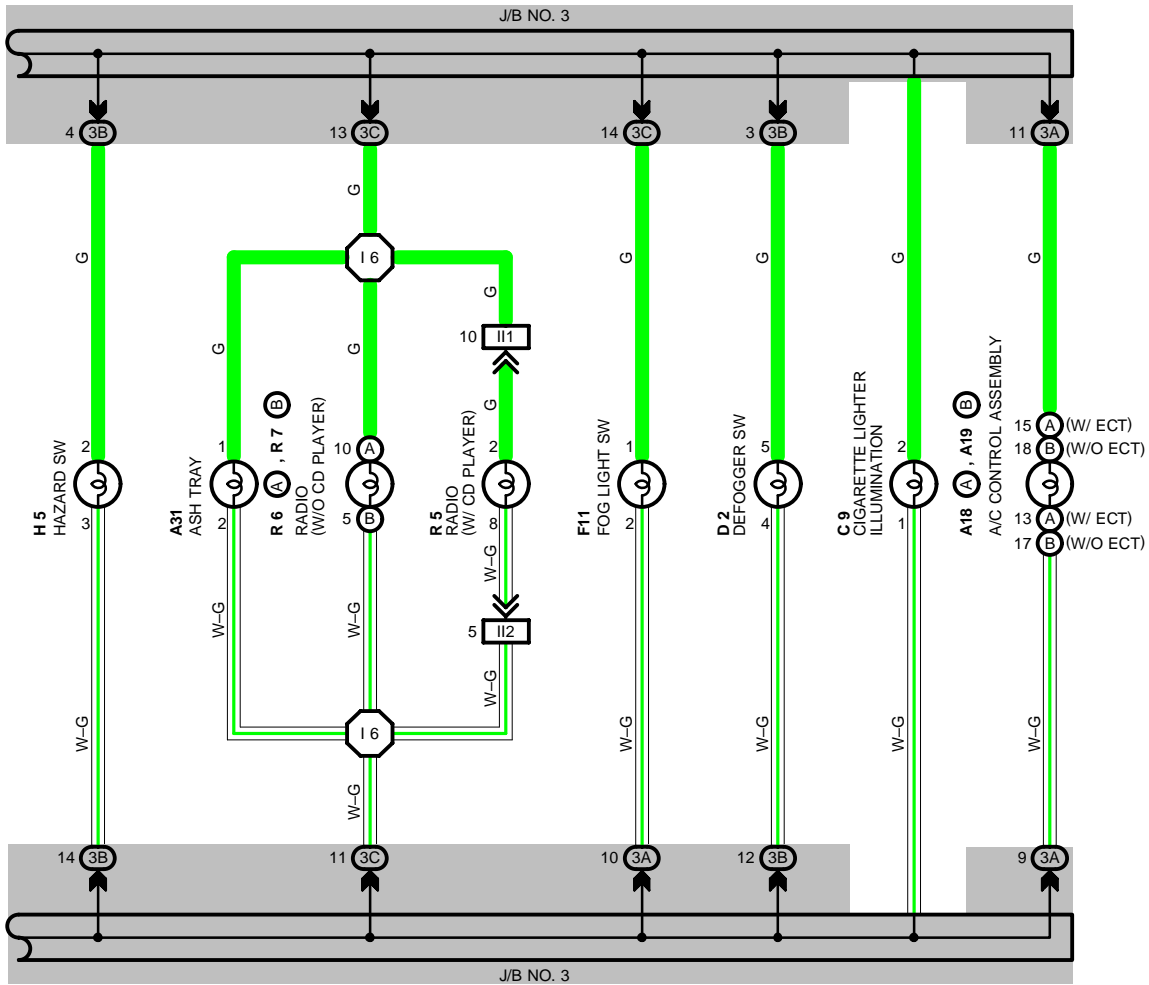

ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM IS OFF)

R 8 RHEOSTAT

1-2 : APPROX. **12** VOLTS WITH RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0** VOLTS WITH FULLY TURNED CLOCKWISE

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A18	A	28		D 2	28
A19	B	28		E 4	29
A31		28		F10	26 (5S-FE), 27 (4A-FE)
C 9		28		F11	29
C13	B	28		G 1	29
C15	A	28		G 2	29
C16		28		H 5	29
				J 6	29
				O 7	29
				R 5	29
				R 6	A
				R 7	B
				R10	29
				R11	29

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1I	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		
3C		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS






CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ET1	32 (5S-FE) 34 (4A-FE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE J/B NO. 2)
II1	36	COWL WIRE AND CONSOLE BOX WIRE (INSTRUMENT PANEL CENTER)
II2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	36	LEFT KICK PANEL

○ : SPLICE POINTS


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 6	36	COWL WIRE			

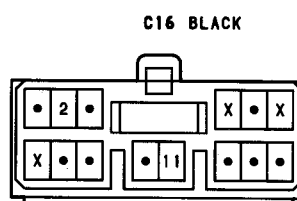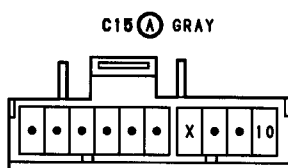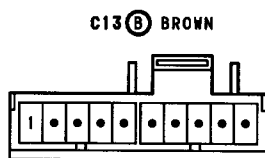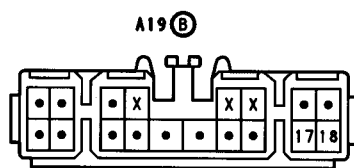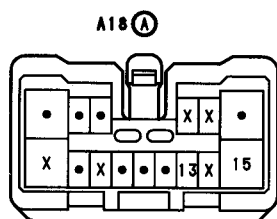

E 4 BLACK



F10 BLACK

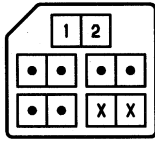

F11 BLACK



 
G 1 GRAY




G 2



H 5 BLACK



J 6

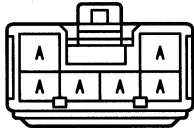


(HINT:SEE PAGE 7)


O 7




R 5

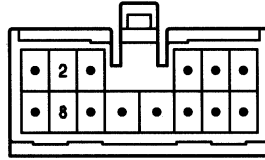


R 6 (A)

 

R 7 (B)

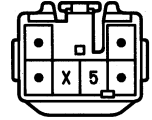

R10

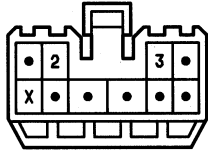

R11

