


OVERDRIVE

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

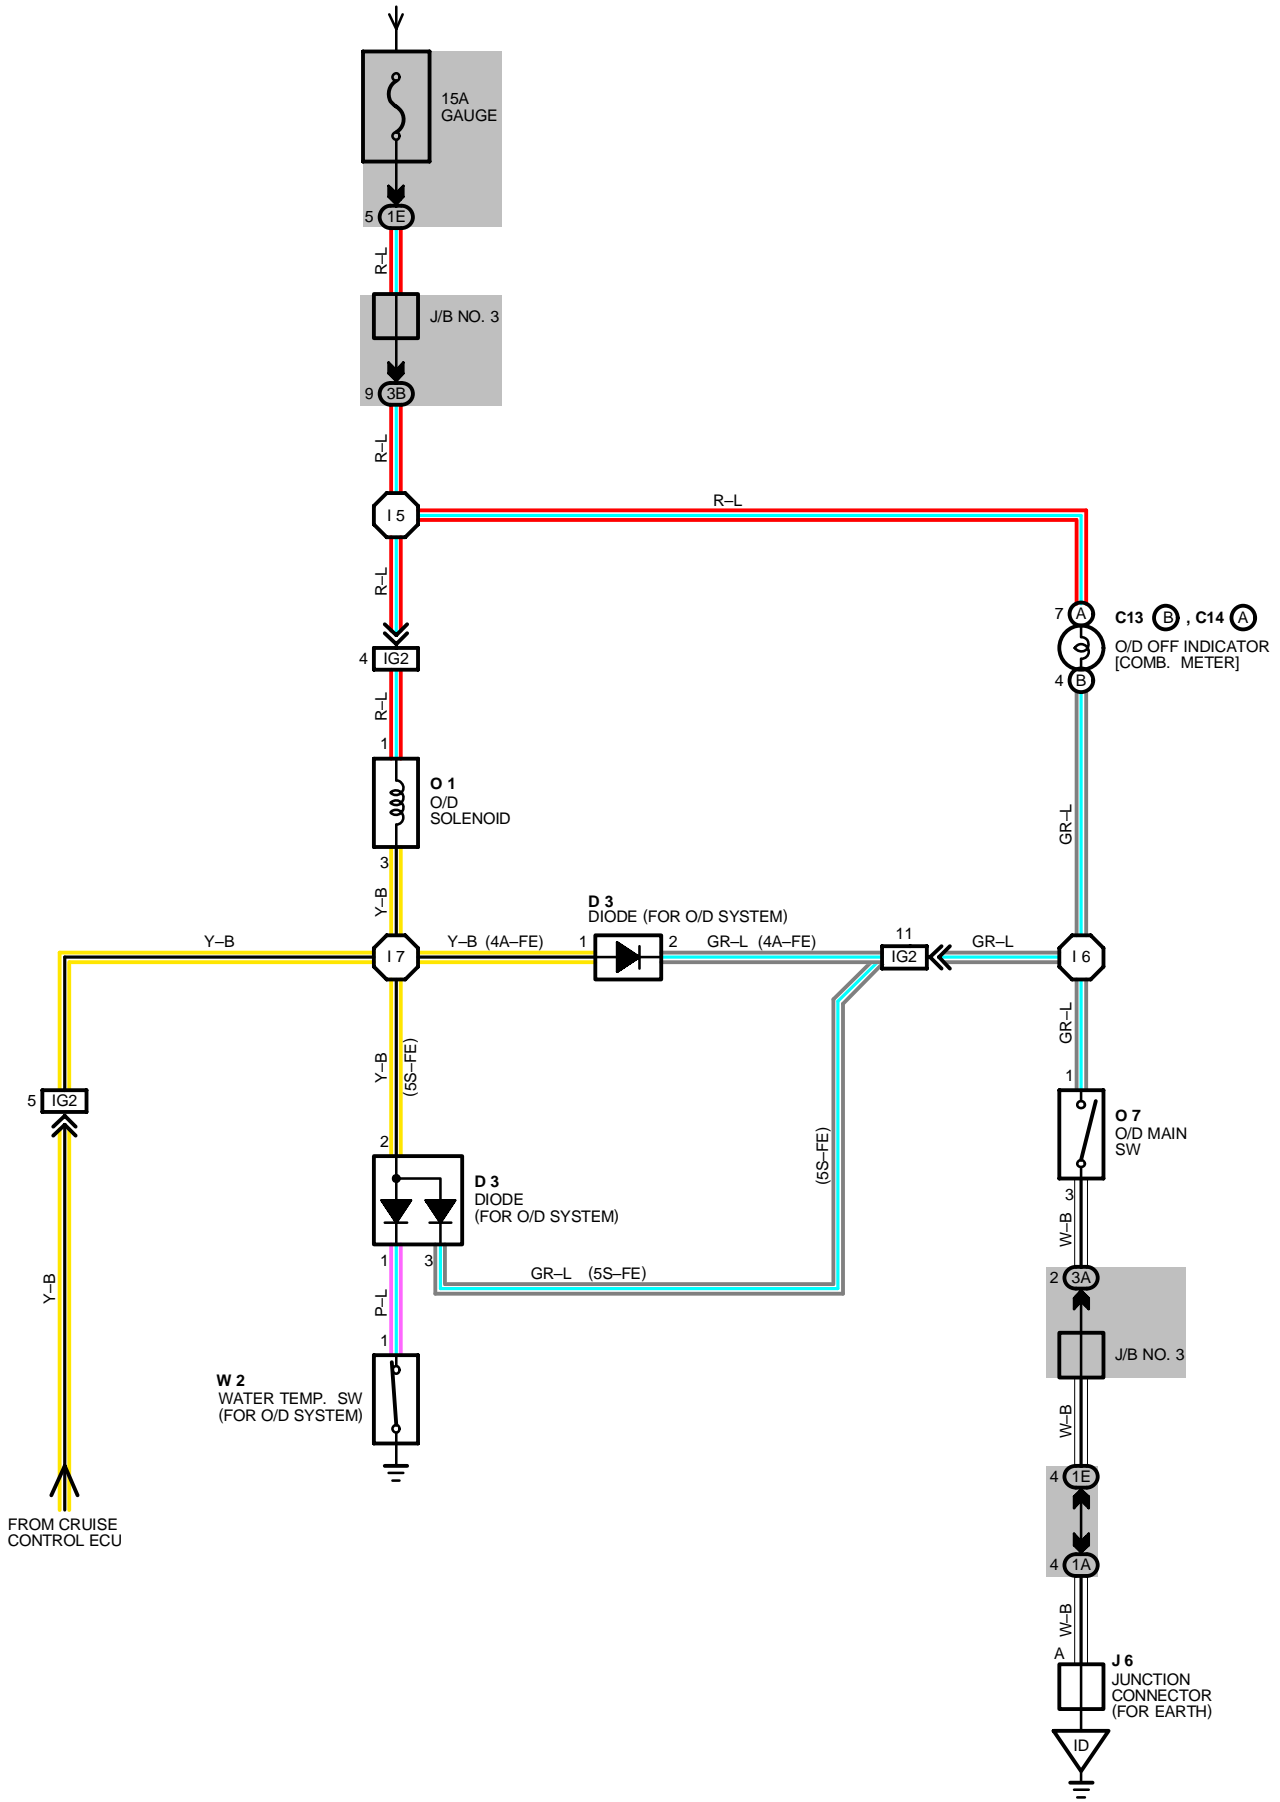

SERVICE HINTS

○ 7 O/D MAIN SW

1-3 : CLOSED WITH O/D MAIN SW OFF, OPEN WITH O/D MAIN SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE	
C13	B	28	J 6	29	W 2	26 (5S-FE)
C14	A	28	O 1	26 (5S-FE), 27 (4A-FE)		
D 3	28	O 7	29			

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS



CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	36	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	36	LEFT KICK PANEL

○ : SPLICE POINTS


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	36	COWL WIRE	I 7	36	ENGINE WIRE
I 6					

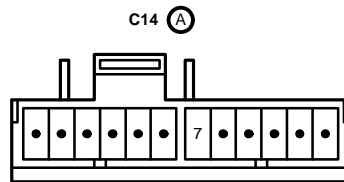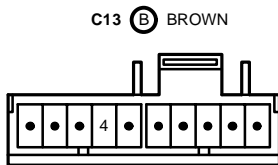

(5S-FE) D 3 BLACK



(4A-FE) D 3 BLACK

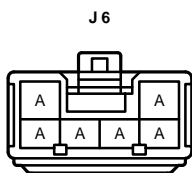

(HINT : SEE PAGE 7)

O 1 BLACK



O 7



W 2 BROWN

