



## SERVICE HINTS

### POWER MAIN RELAY

(2) 1-(2) 4 : CLOSED WITH IGNITION SW AT ON POSITION

### P 4 POWER SEAT SW

7- GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

8- GROUND : ALWAYS CONTINUITY

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 5	28	J 6	29	P 3	30 (L/B), 31 (C/P)
J 4	29	P 2	30 (L/B), 31 (C/P)	P 4	30 (L/B), 31 (C/P)

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	23	R/B NO. 2 (LEFT KICK PANEL)

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	36	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
BL1	38 (L/B)	FLOOR WIRE AND FRAME WIRE (LEFT SIDE OF FRONT FLOOR PANEL)
	40 (C/P)	
BM1	38 (L/B)	FRAME WIRE AND SEAT WIRE (UNDER THE DRIVER'S SEAT)
	40 (C/P)	

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	36	LEFT KICK PANEL
BI	38 (L/B)	UNDER THE LEFT CENTER PILLAR

D 5 BLACK




J 4



(HINT : SEE PAGE 7)

J 6

 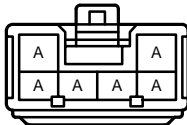


(HINT : SEE PAGE 7)

P 2



P 3 BLUE



P 4

