


RADIO AND PLAYER (w/o CD PLAYER)

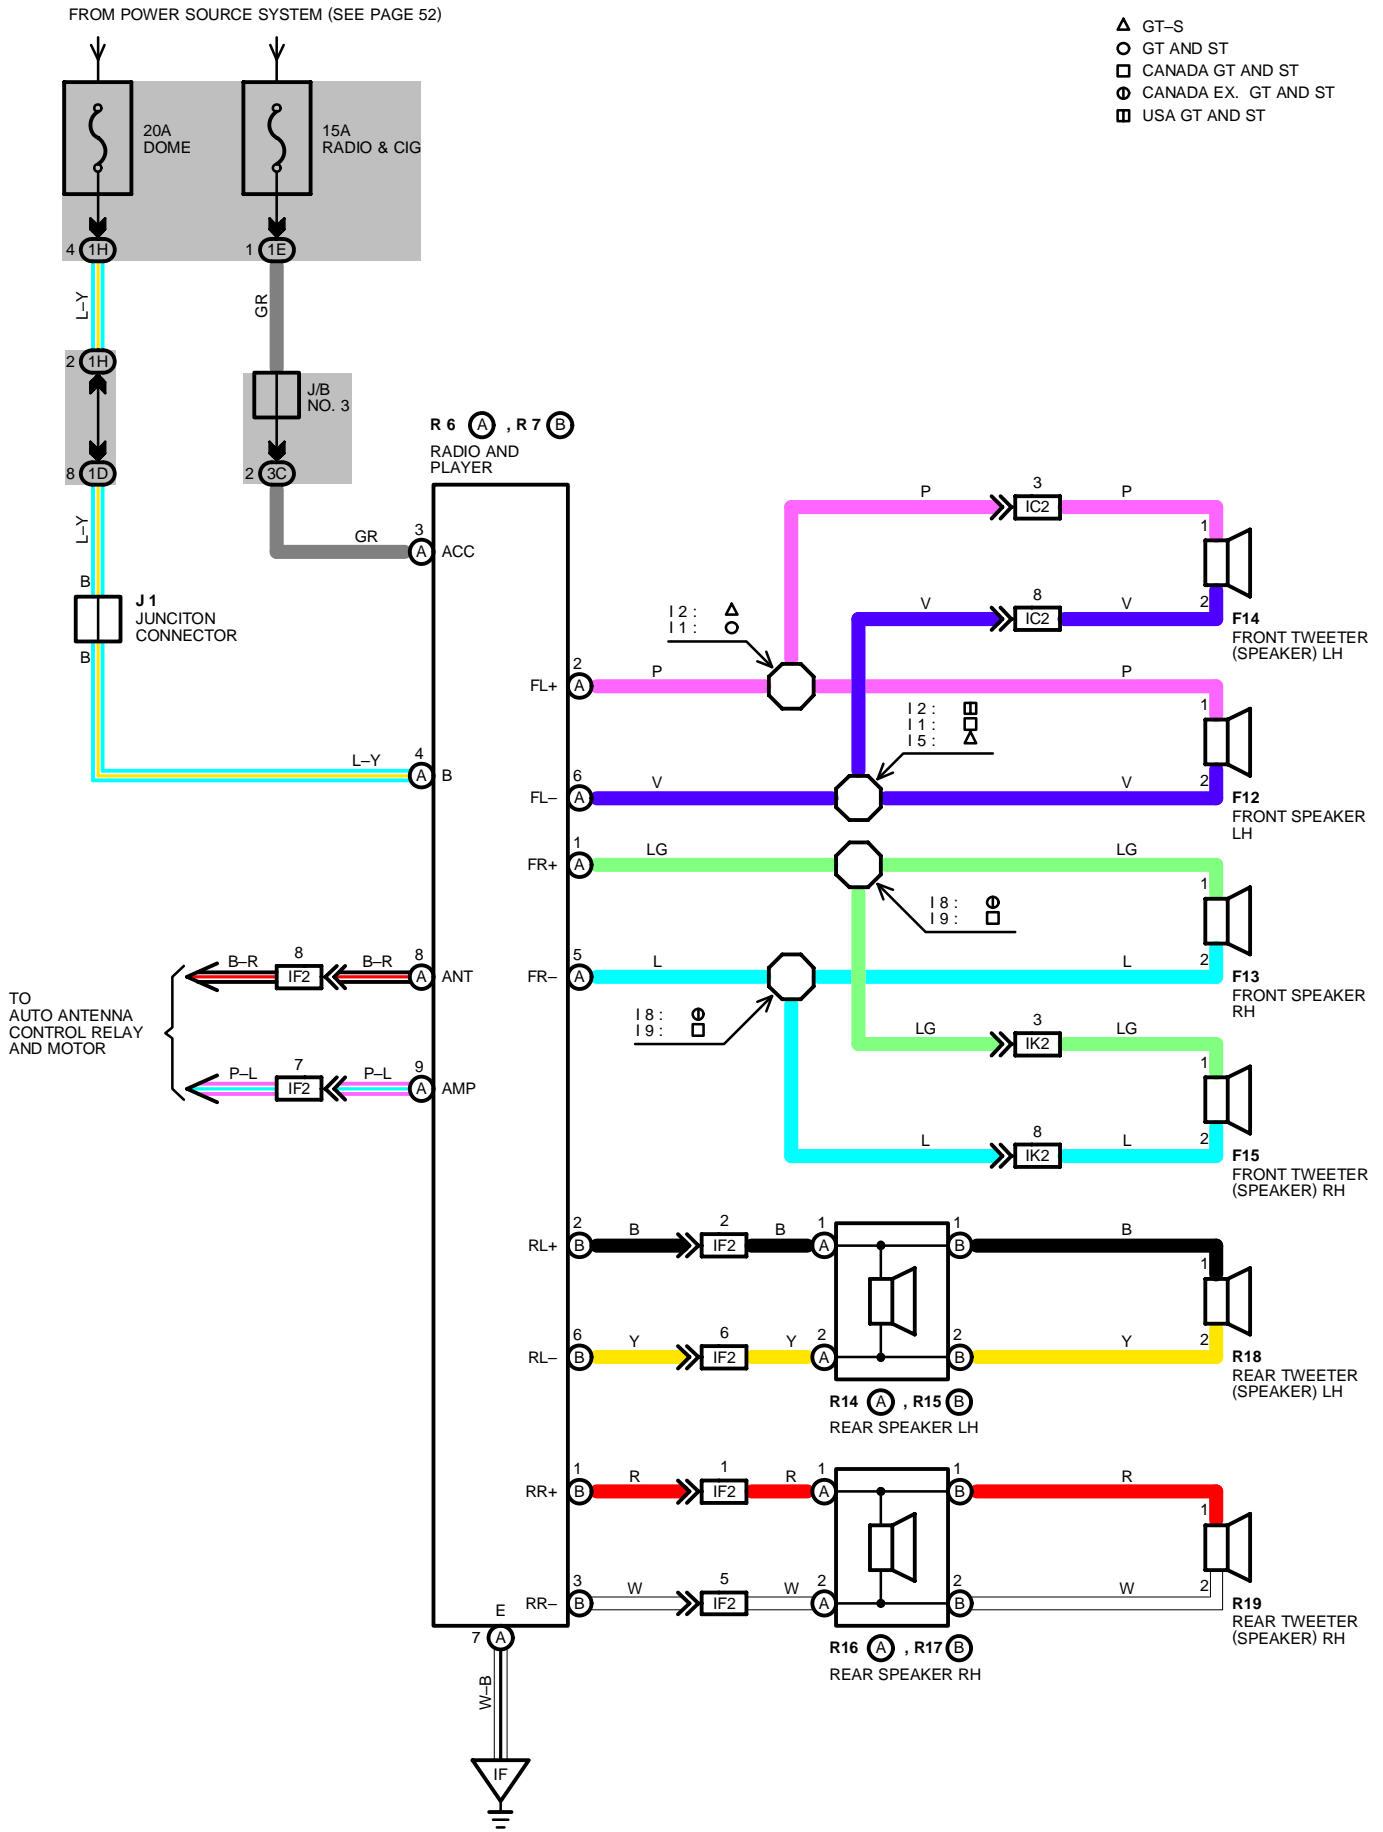

SERVICE HINTS

R 6(A), R 7(B) RADIO AND PLAYER

(A) 4-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON OR ACC POSITION

(A) 7-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F12	29	R 6	A 29	R17	B 30 (L/B), 31 (C/P)
F13	29	R 7	B 29	R18	30 (L/B), 31 (C/P)
F14	30 (L/B), 31 (C/P)	R14	A 30 (L/B), 31 (C/P)	R19	30 (L/B), 31 (C/P)
F15	30 (L/B), 31 (C/P)	R15	B 30 (L/B), 31 (C/P)		
J 1	29	R16	A 30 (L/B), 31 (C/P)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3C	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	36	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IK2	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	36	INSTRUMENT PANEL BRACE RH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I1	36	COWL WIRE	I 8	36	COWL WIRE
I2			I 9		
I5					

 
F12, F13



F14, F15




J 1




(HINT : SEE PAGE 7)

 
R 6 (A)



R 7 (B)

 

R14 (A), R16 (A)

 

R15 (B), R17 (B)



R18, R19

