


# REMOTE CONTROL MIRROR

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

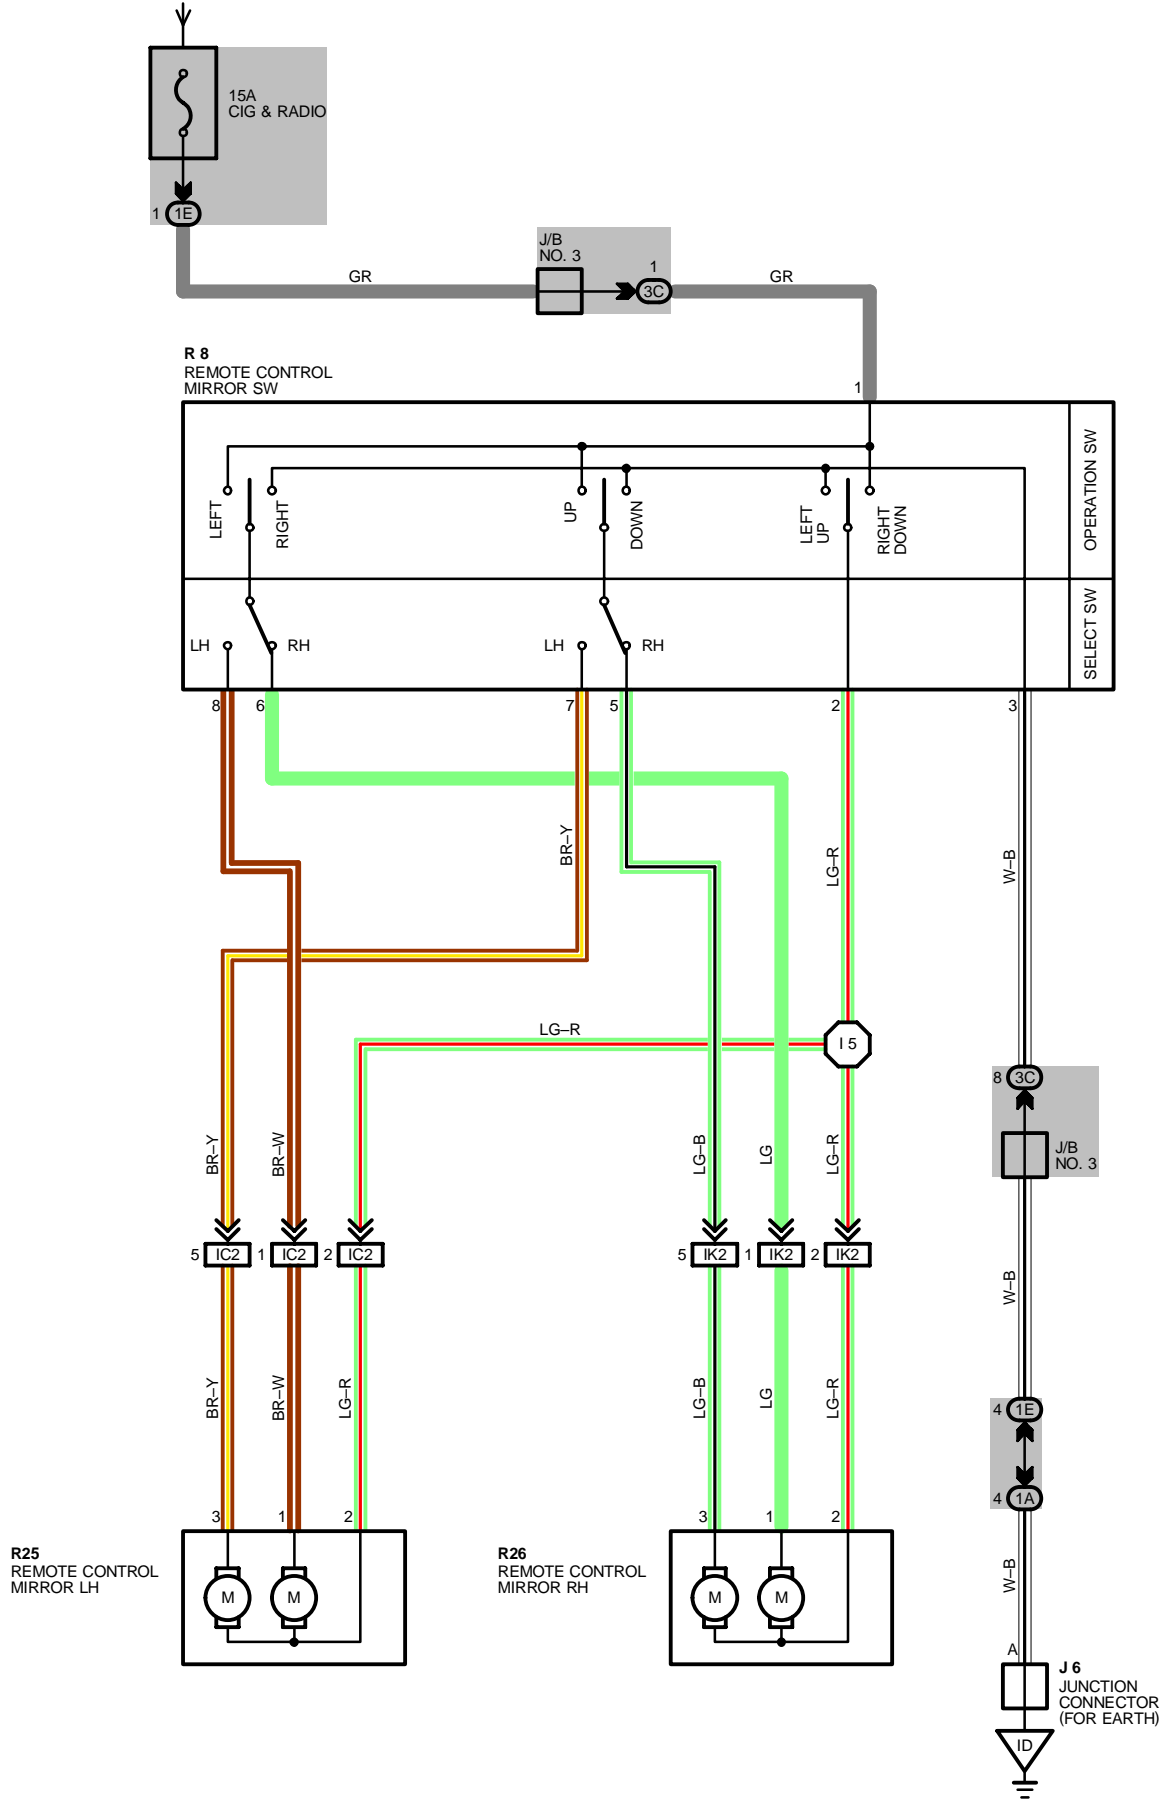

## SERVICE HINTS

### R 8 REMOTE CONTROL MIRROR SW

- 1-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 2-3 : CONTINUITY WITH OPERATION SW AT **UP** OR **LEFT** POSITION
- 1-2 : CONTINUITY WITH OPERATION SW AT **DOWN** OR **RIGHT** POSITION

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 6	29	R25	30 (L/B), 31 (C/P)		
R 8	29	R26	30 (L/B), 31 (C/P)		

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E		
3C	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC2	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IK2	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	36	LEFT KICK PANEL

### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	36	COWL WIRE			

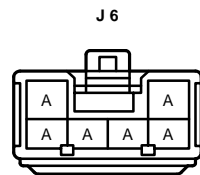

(HINT : SEE PAGE 7)

