

SERVICE HINTS

T 2 TURN SIGNAL FLASHER

2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON

1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT, OR WITH HAZARD SW ON

3-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C14	28	H 5	29	R13	30 (L/B), 31 (C/P)
C16	28	J 3	29	T 2	29
F 7	26 (5S-FE), 27 (4A-FE)	J 6	29		
F 8	26 (5S-FE), 27 (4A-FE)	R12	30 (L/B), 31 (C/P)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1F	18	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO.2 (NEAR THE BATTERY)
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
BP1	38 (L/B)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LEFT QUARTER PANEL CENTER)
BP2	40 (C/P)	FLOOR WIRE AND LUGGAGE ROOM WIRE (LUGGAGE COMPARTMENT LEFT)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	32 (5S-FE)	FRONT RIGHT FENDER
	34 (4A-FE)	
EB	32 (5S-FE)	FRONT LEFT FENDER
	34 (4A-FE)	
ID	36	LEFT KICK PANEL
BL	38 (L/B)	BACK PANEL CENTER
	40 (C/P)	


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	36	COWL WIRE	B11	40 (C/P)	LUGGAGE ROOM WIRE
B11	38 (L/B)	LUGGAGE ROOM WIRE			

C14

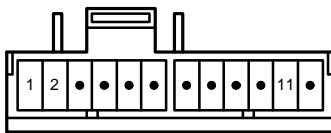


C16 BLACK

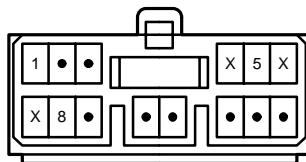


F 7, F 8 BLACK



 H 5 BLACK




J 3

 


(HINT : SEE PAGE 7)

J 6

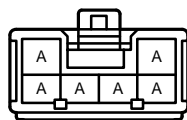

(HINT : SEE PAGE 7)

 R12, R13



T 2

