

# JACKING & HOISTING

1993 Toyota Celica

1993 WHEEL ALIGNMENT  
Toyota Jacking & Hoisting  
Celica

## JACKING & HOISTING

### FLOOR JACK

To raise vehicle front, place floor jack under center of front longitudinal engine crossmember. For vehicle rear, place floor jack under rear suspension crossmember.

### EMERGENCY JACKING

Place emergency jack on reinforced support points of side body panel (between front and rear wheels). Safety stands may also be placed at these points. See Fig. 1.

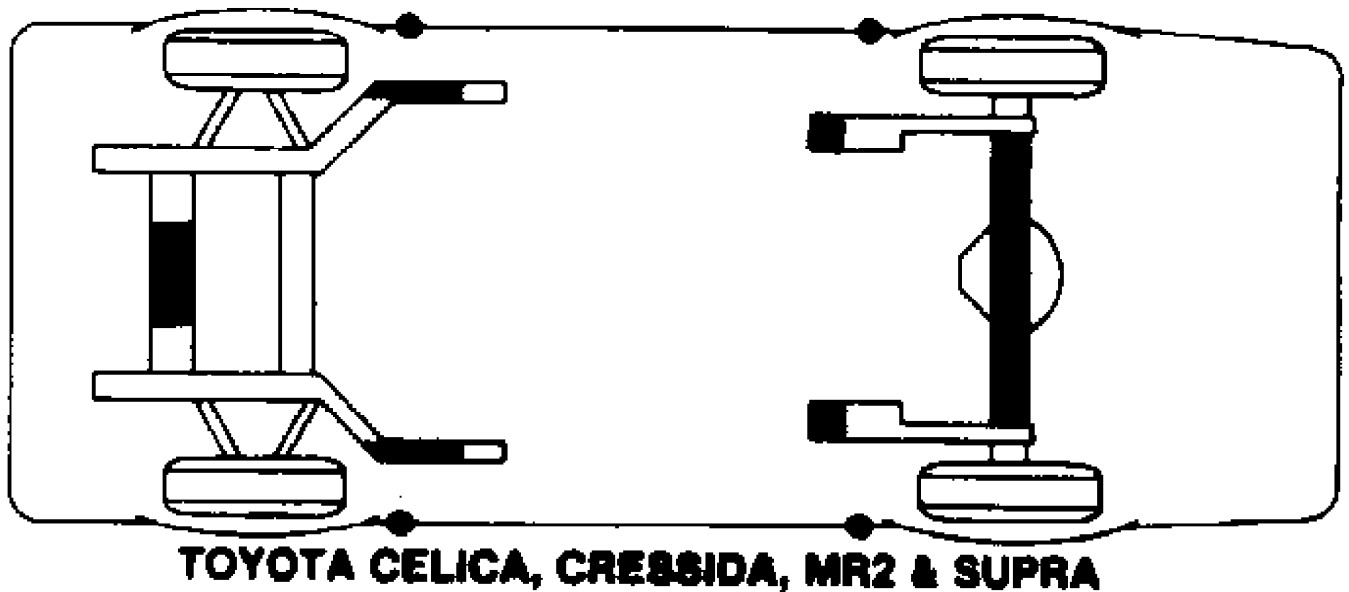


Fig. 1: Identifying Jacking & Hoisting Support Points  
Courtesy of Toyota Motor Sales, U.S.A., Inc.

### LIFTING VEHICLE WITH HOIST

Place lift blocks on reinforced support points of side body panel (between front and rear wheels). Safety stands may also be placed at these points. See Fig. 1.