

# JACKING & HOISTING

1994 Toyota Celica

1994 WHEEL ALIGNMENT  
Toyota - Jacking & Hoisting  
Camry, Celica, Corolla

## JACKING & HOISTING

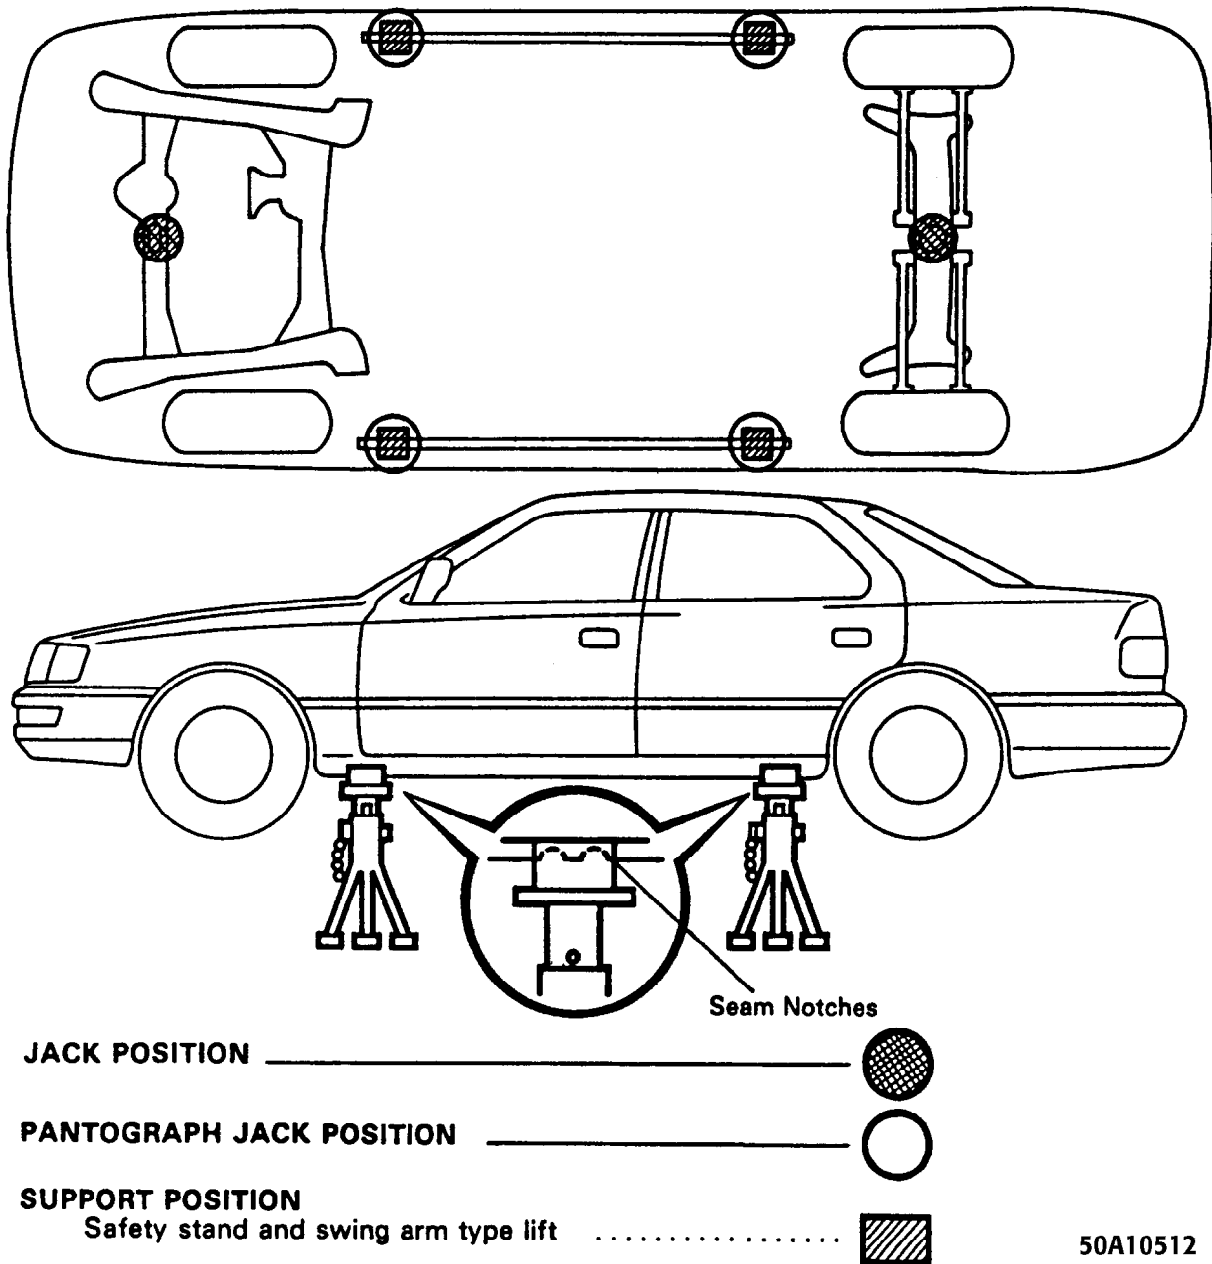


Fig. 1: Jacking & Hoisting Support Points (Typical)  
Courtesy of Toyota Motor Sales, U.S.A., Inc.

50A10512

FLOOR JACK

To raise vehicle front, place floor jack under center of front longitudinal engine crossmember. For vehicle rear, place floor jack under rear suspension crossmember. See Fig. 1.

### **EMERGENCY JACKING**

Place emergency jack on reinforced support points of side body panel (between front and rear wheels). Safety stands may also be placed at these points. See Fig. 1.

### **LIFTING VEHICLE WITH HOIST**

Place lift blocks on reinforced support points of side body panel (between front and rear wheels). Safety stands may also be placed at these points. See Fig. 1.