



# COMBINATION METER

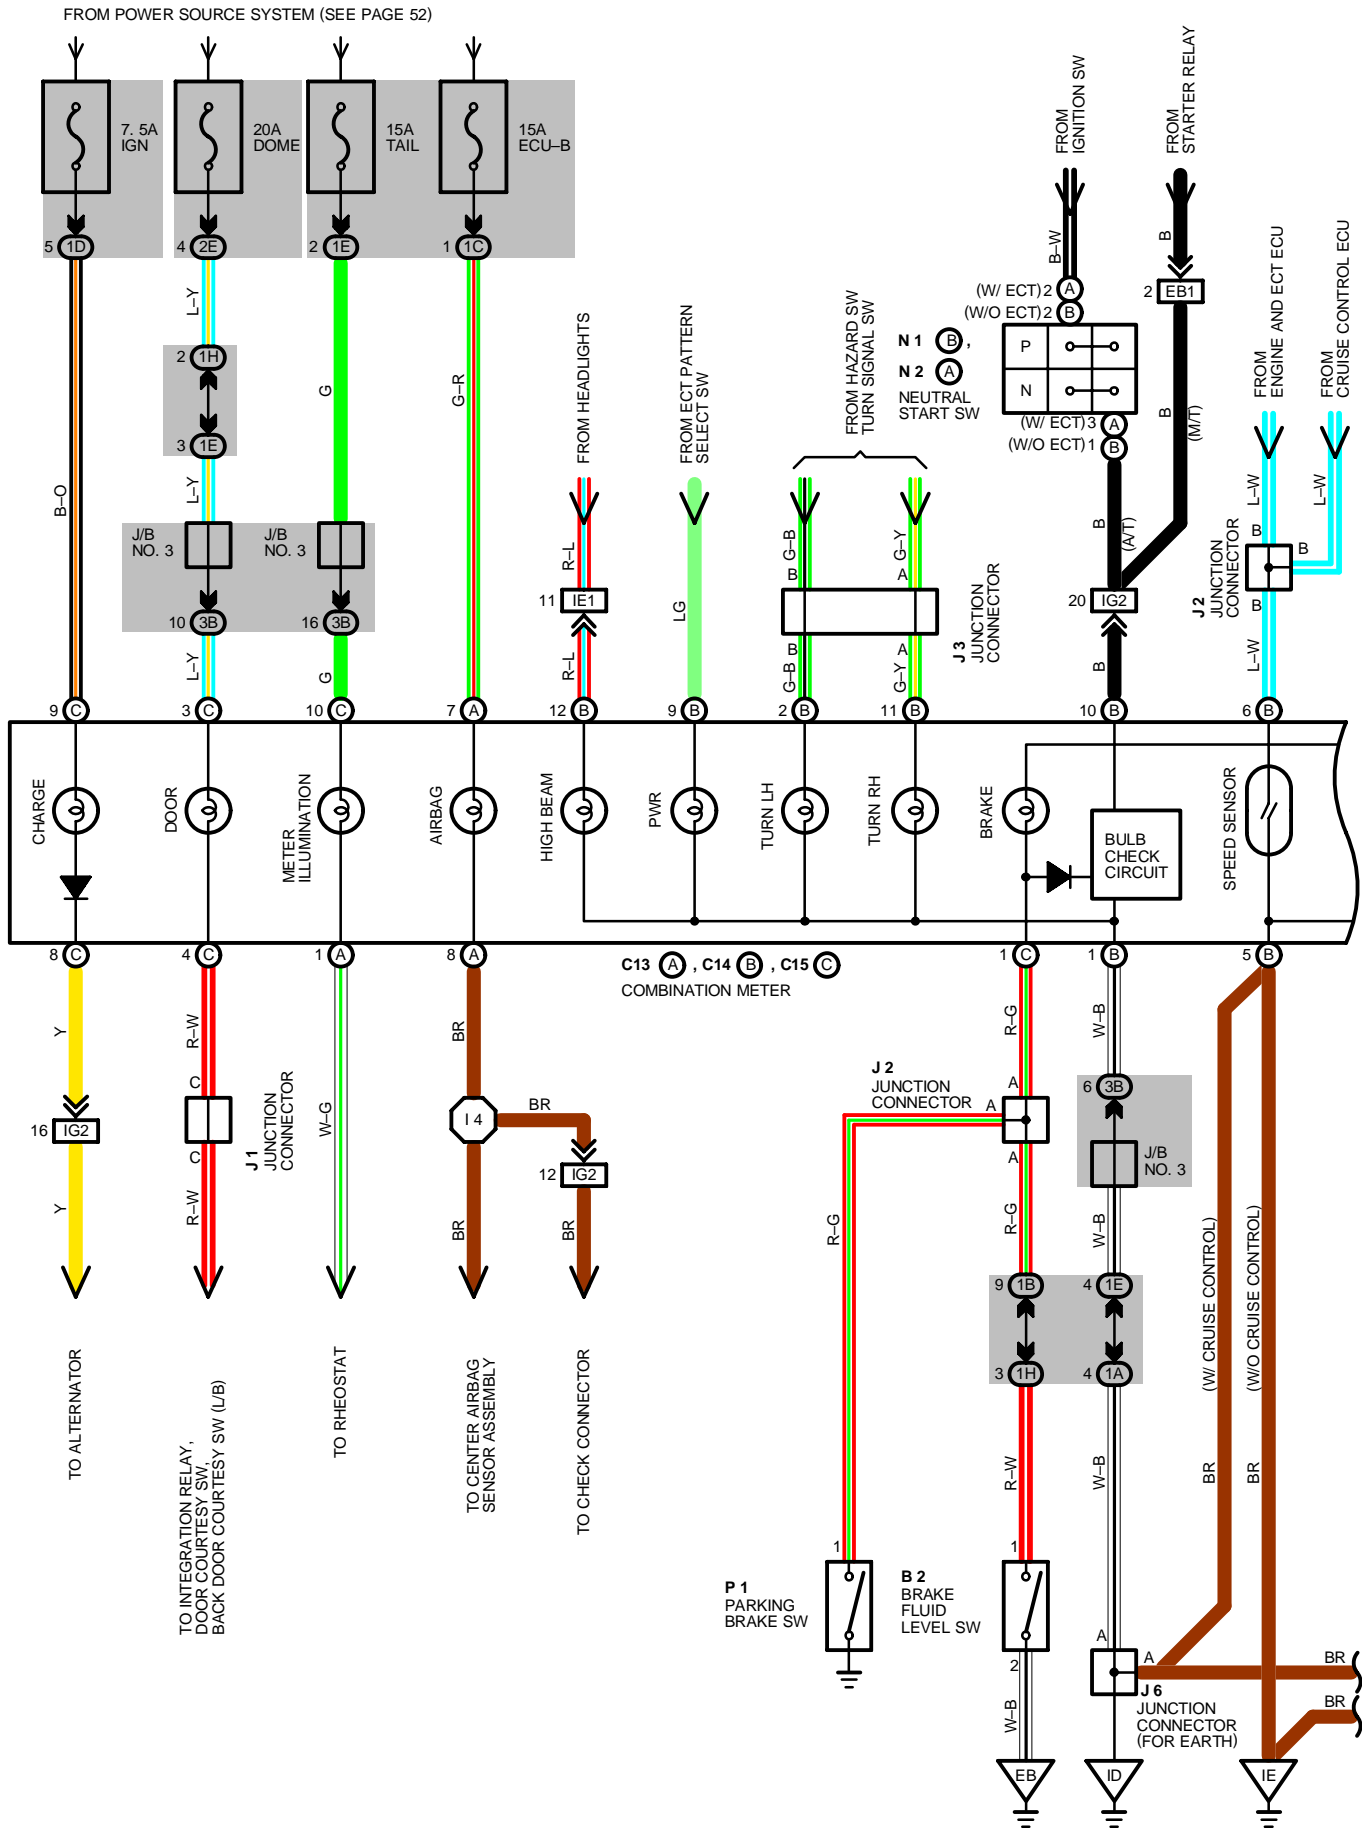

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

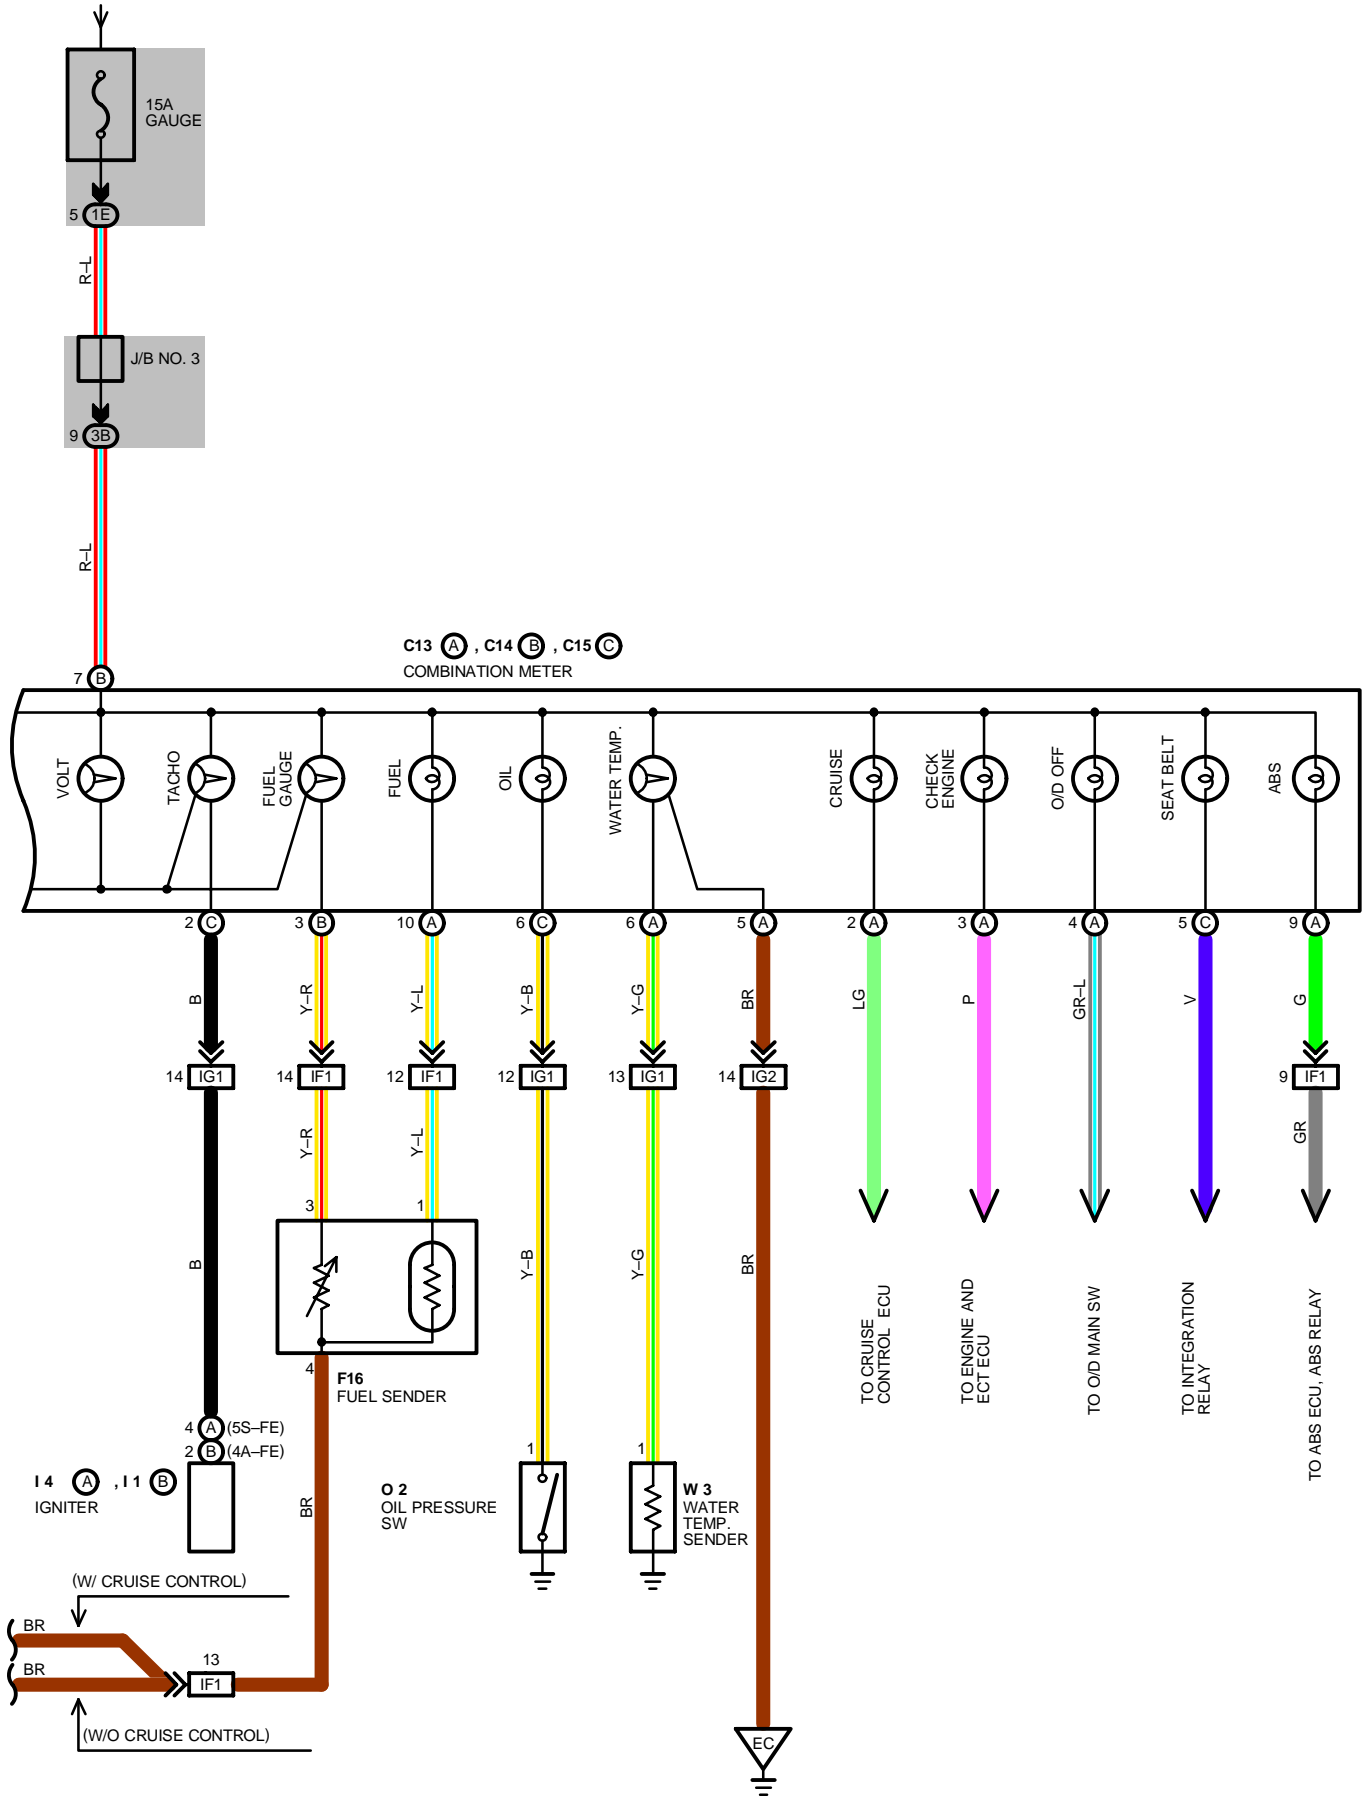

# COMBINATION METER

## SERVICE HINTS

### B 2 BRAKE FLUID LEVEL SW

1-2 : CLOSED WITH FLOAT DOWN

### C13(A), C14(B), C15(C) COMBINATION METER

(A) 7, (C) 3-GROUND : ALWAYS APPROX. 12 VOLTS

(B) 7, (C) 9-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

(A) 5, (B) 1, (B) 5-GROUND : ALWAYS CONTINUITY

### F16 FUEL SENDER

3-4 : APPROX. 3 Ω WITH FUEL FULL

APPROX. 110.0 Ω WITH FUEL EMPTY

### O 2 OIL PRESSURE SW

1-GROUND : CLOSED WITH OIL PRESSURE BELOW 0.2 KG/CM<sup>2</sup> (2.84 SPI, 19.61 KPA)

### P 1 PARKING BRAKE SW

1-GROUND : CLOSED WITH PARKING BRAKE LEVER PULLED UP

### W 3 WATER TEMP. SENDER

1-GROUND : APPROX. 226 Ω AT 50°C (122°F)

APPROX. 26.4 Ω AT 115°C (239°F)

## ○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
B 2		26 (5S-FE), 27 (4A-FE)	I 4	A	26 (5S-FE)	N 2	A	26 (5S-FE)
C13	A	28	J 1		29	O 2		26 (5S-FE), 27 (4A-FE)
C14	B	28	J 2		29	P 1		29
C15	C	28	J 3		29	W 3		26 (5S-FE), 27 (4A-FE)
F16		30 (L/B), 31 (C/P)	J 6		29			
I 1	B	27 (4A-FE)	N 1		B			26 (5S-FE), 27 (4A-FE)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1C		
1D		
1E		
1H	18	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
2E	20	ENGINE ROOM MAIN WIRE AND J/B NO. 2 (NEAR THE BATTERY)
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	32 (5S-FE)	ENGINE WIRE AND COWL WIRE (REAR SIDE OF RIGHT FRONT FENDER)
	34 (4A-FE)	
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	36	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	36	ENGINE WIRE AND COWL WIRE (UNDER THE ENGINE ECU)
IG2		

## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	32 (5S-FE)	FRONT LEFT FENDER
	34 (4A-FE)	
EC	32 (5S-FE)	INTAKE MANIFOLD
	34 (4A-FE)	
ID	36	LEFT KICK PANEL
IE	36	INSTRUMENT PANEL BRACE LH

 
## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 4	36	COWL WIRE			


B 2 GRAY




C13 (A) BROWN



C14 (B)

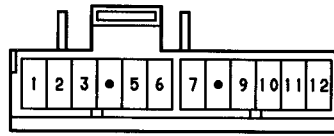


C15 (C) GRAY

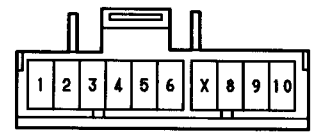

F16 DARK GRAY (4A-FE) I 1 (B) DARK GRAY (5S-FE) I 4 (A) BLACK




 J 1




(HINT:SEE PAGE 7)

 J 2, J 3




(HINT:SEE PAGE 7)

 J 6




(HINT:SEE PAGE 7)

N 1 (B) GRAY

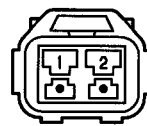

N 2 (A) GRAY

 

O 2 BLACK



P 1 BLACK



W 3 GRAY

