


REAR WINDOW DEFOGGER

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

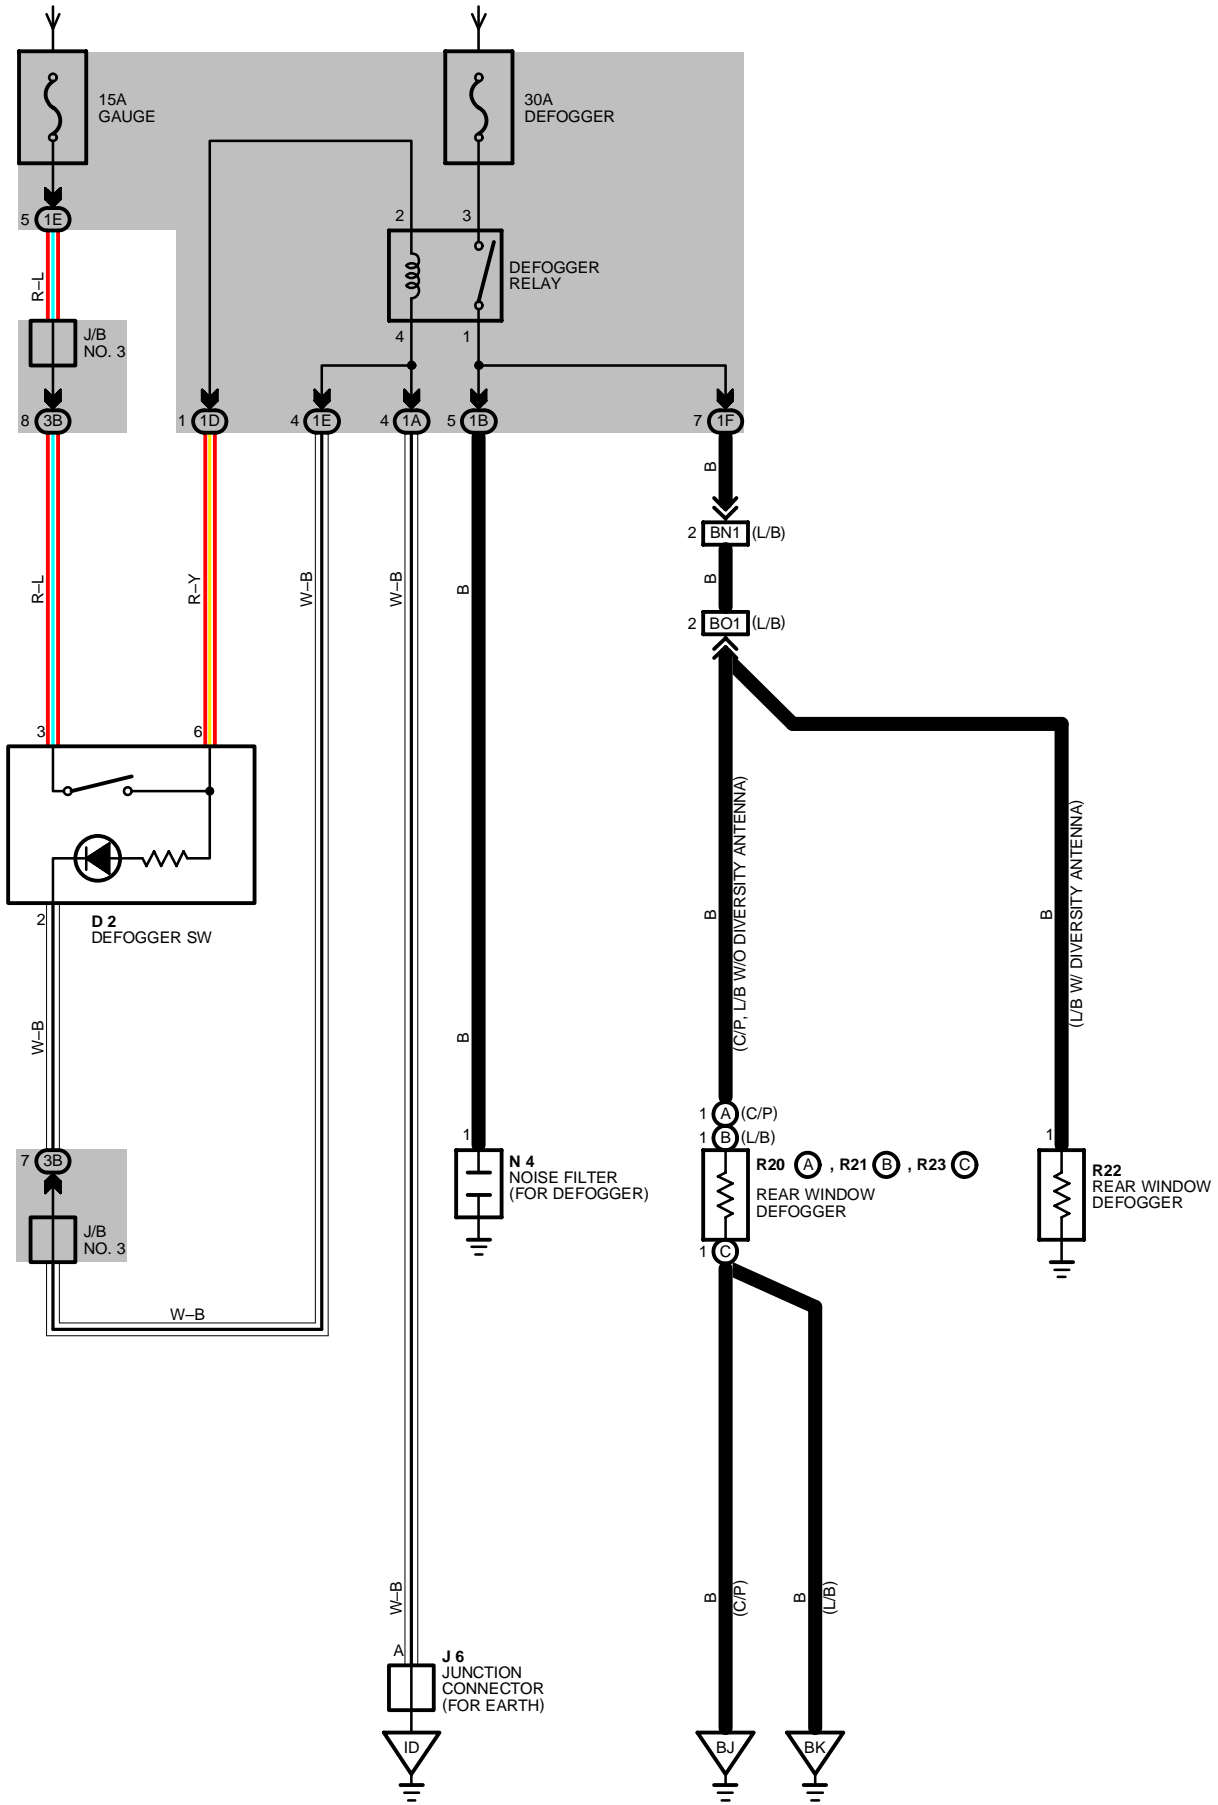

SERVICE HINTS

DEFOGGER RELAY

1-3 : CLOSED WITH IGNITION SW ON AND DEFOGGER SW ON

D2 DEFOGGER SW

3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

2-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 2	28	R20	A	31 (C/P)	R23 C 30 (L/B), 31 (C/P)
J 6	29	R21	B	30 (L/B)	
N 4	29	R22		30 (L/B)	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1B		
1D		
1E		
1F	18	FLOOR WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BN1	38 (L/B)	BACK DOOR NO. 1 WIRE AND FLOOR WIRE (LEFT SIDE OF PACKAGE TRAY TRIM)
BO1	38 (L/B)	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 1 SUB WIRE (BACK DOOR UPPER LEFT)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	36	LEFT KICK PANEL
BJ	40 (C/P)	RIGHT REAR PILLAR (C/P)
BK	38 (L/B)	BACK DOOR RIGHT (L/B)

D 2 BLACK



J 6

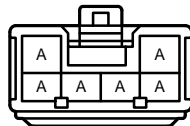

(HINT : SEE PAGE 7)

N 4



R20 (A), R21 (B), R23 (C) BLACK



R22

